

## LED HIGH OUTPUT OUTDOOR CYLINDER - UP/DOWN CCT & WATTAGE SELECTABLE LR40338


### CAUTION

IN ORDER TO PREVENT POSSIBLE SHOCK, TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE LIGHT FIXTURE.


### WARNING

ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODE (N.E.C.) STANDARDS. IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS HIRE A QUALIFIED ELECTRICIAN. REMOVE THE FIXTURE AND THE MOUNTING PACKAGE FROM THE BOX AND MAKE SURE THAT NO PARTS ARE MISSING BY REFERENCING THE ILLUSTRATIONS ON THE INSTALLATION INSTRUCTIONS.

### BOX CONTENTS

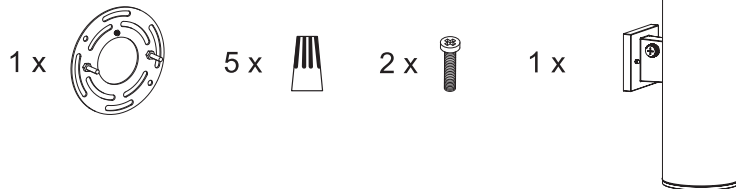

### TOOLS NEEDED (NOT INCLUDED)

 

Phillips screwdriver

### INSTRUCTIONS

**1**

**2**

**3**

**4**

**5**

**6**

**7**

**8**

ONCE INSTALLED, USE WATERPROOF SILICONE (NOT INCLUDED) TO SEAL BETWEEN THE EDGES AND THE FIXTURE.

1	2	CCT	3	4	POWER	5	PHOTOCELL
↑↑	↑↑	OFF	↑↑	↑↑	40W	↑	ON
↑↑	↑↑	3000K	↑↑	↑↑	30W	↑	OFF
↑↑	↑↑	4000K	↑↑	↑↑	20W		
↑↑	↑↑	5000K	↑↑	↑↑	10W		

SLIDE	LIGHT DIRECTION
→	UP LIGHT
←	UP-DOWN LIGHT