







# KT-LED27PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

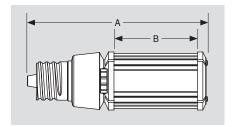

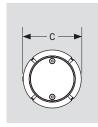

### LAMP DIMENSIONS

A (Body Length)	7.18"
B (Illuminated Length)	3.72"
C (Diameter)	2.32"

BASE TYPE: EX39 (Mogul)

## WIRING INSTRUCTIONS


### STEP 1

**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2


Rewire for line voltage to the lamp socket.

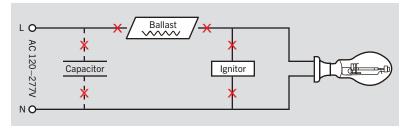



# L O AC 120 Lamp holder


### STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.

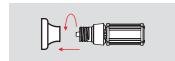

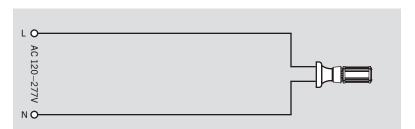

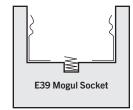

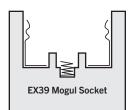









# KT-LED36PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

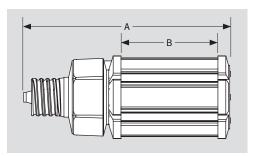

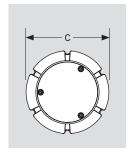

### LAMP DIMENSIONS

A (Body Length)	8.31"
B (Illuminated Length)	4.41"
C (Diameter)	3.35"

BASE TYPE: EX39 (Mogul)

## WIRING INSTRUCTIONS


### STEP 1

**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2


Rewire for line voltage to the lamp socket.

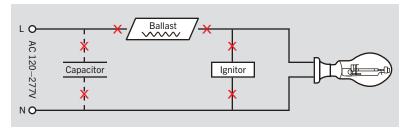


# L O AC 120 Lamp holder N O

## STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.

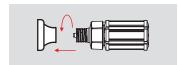

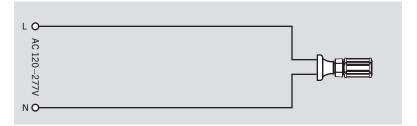













# KT-LED45PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

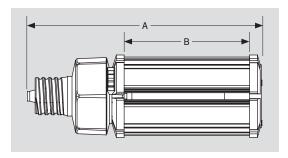

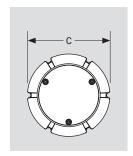

### LAMP DIMENSIONS

A (Body Length)	9.49"
B (Illuminated Length)	5.55"
C (Diameter)	3.35"

BASE TYPE: EX39 (Mogul)

## WIRING INSTRUCTIONS


### STEP 1


**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.



Rewire for line voltage to the lamp socket.

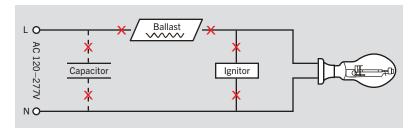


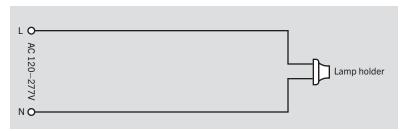

## STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.



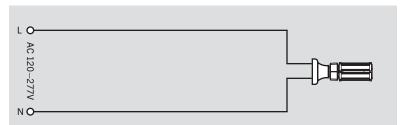













# KT-LED54PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

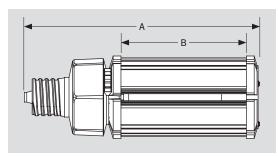

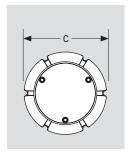

### LAMP DIMENSIONS

A (Body Length)	9.49"
B (Illuminated Length)	5.55"
C (Diameter)	3.35"

BASE TYPE: EX39 (Mogul)

## WIRING INSTRUCTIONS


### STEP 1

**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2


Rewire for line voltage to the lamp socket.

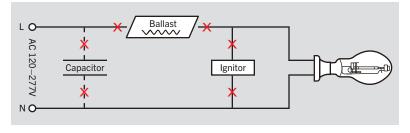


# L O AC 120 Lamp holder N O

## STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.

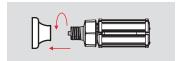

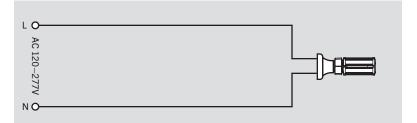













# KT-LED63PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

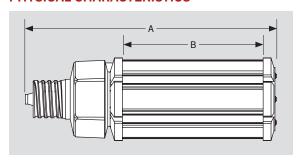

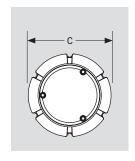

### LAMP DIMENSIONS

A (Body Length)	10.08"
B (Illuminated Length)	6.18"
C (Diameter)	3.35"

BASE TYPE: EX39 (Mogul)

## WIRING INSTRUCTIONS


### STEP 1

**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2

Rewire for line voltage to the lamp socket.

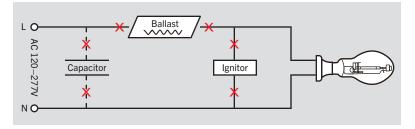


# L O AC 120 Lamp holder N O


## STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.



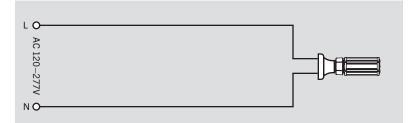



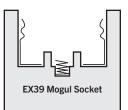









# KT-LED80PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

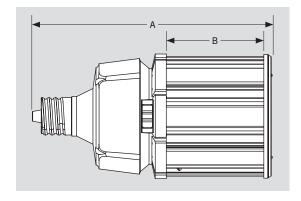

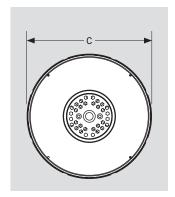

### LAMP DIMENSIONS

A (Body Length)	9.88"
B (Illuminated Length)	4.02"
C (Diameter)	5.12"

BASE TYPE: EX39 (Mogul)

## **WIRING INSTRUCTIONS**


### STEP 1


**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2


Rewire for line voltage to the lamp socket.

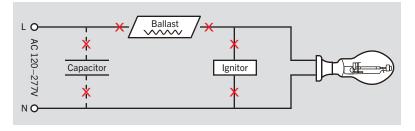


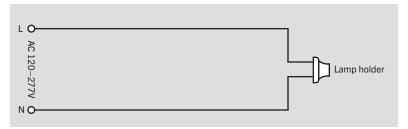


## STEP 3


Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.

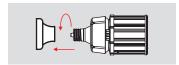

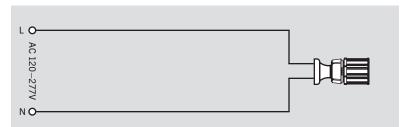

EX39-based lamps will work in both E39 and EX39 sockets.

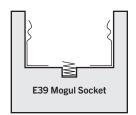

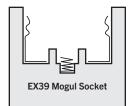









# KT-LED100PSHID-EX39-8XX-D/G4

HID REPLACEMENT LED LAMP

# PHYSICAL CHARACTERISTICS

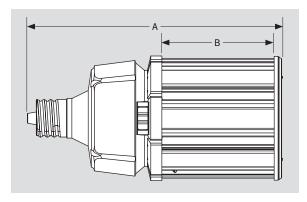

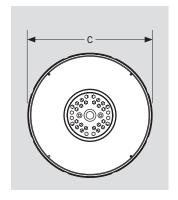

### LAMP DIMENSIONS

A (Body Length)	10.47"
B (Illuminated Length)	4.61"
C (Diameter)	5.12"

BASE TYPE: EX39 (Mogul)

## **WIRING INSTRUCTIONS**


### STEP 1


**Disconnect power.** Disconnect and remove existing ballast, capacitor, and/or ignitor (where applicable) from fixture.

**Note:** Follow all federal and local regulations when disposing of lamps and removed components.

# STEP 2


Rewire for line voltage to the lamp socket.

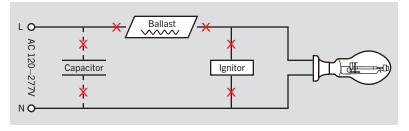


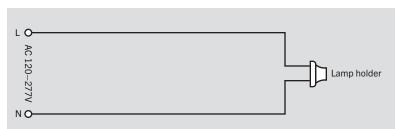

# STEP 3

Install new LED replacement lamp. Ensure lamp is operating properly when power is turned on.

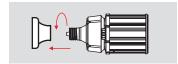

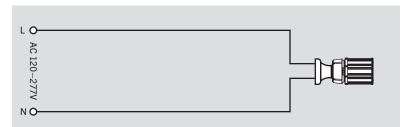

EX39-based lamps will work in both E39 and EX39 sockets.



