

LED Security Flood Light Installation Instructions



Cautions:


- 1. Do not use the electric generator to test the LED lamp.
- 2. Please abide by related country, regional and local law and regulations when install this lamp.
- 3. Please turn off the power before installation or maintenance.
- 4. Proper grounding is required to ensure safety.

Notice:

- 1.To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
- 2. Please wear gloves to avoid injury before installation.
- 3.If any smoke or spark of the wire happened, please turn off the power immediately and notify relevant personnel.

Attention:

- 1. Please check if there is any damage during shipping. If so, please contact manufacturer timely.
- 2.Please read the installation instruction carefully to check whether all the accessories are available. After confirmation, install the fixture according to installation steps.

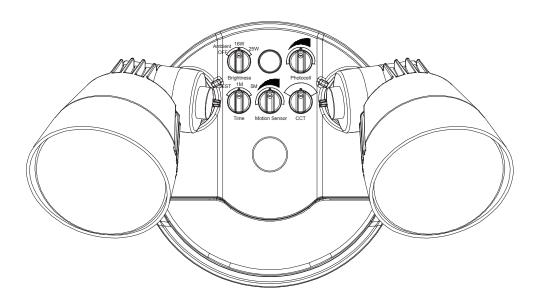


INSTALLATION INSTRUCTIONS


1. Turn power off before installation (Figure 1).




2. Secure the mounting bracket to the junction box with appropriate screws (Figure 2).

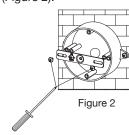


3. Attach the pad on the bottom of the lamp, and hang the lamp on the bracket through the hanging rope (Figure 3).

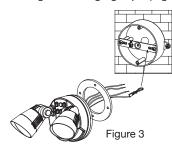

4. Connect the wires to the main properly and make good protection (Figure 4).

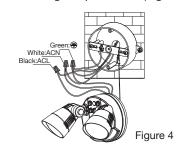

5. Remove the rubber cap and fasten the lamp to the bracket with screws (Figure 5).

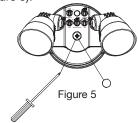

6. Put the rubber cap back (Figure 6).

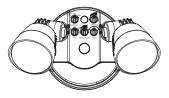


Figure 6

7. Make sure installation is complete before turning on the power (Figure 7).

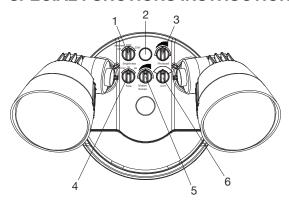


Figure 7

8. After installation, calk all the mounting surface.

page 1

SPECIAL FUNCTIONS INSTRUCTION



1. Adjustable Brightness:

- Ambient Off: Double head uses 25W + ambient light is off.
- 16W: Double head uses 16W + 3W ambient light.
- 25W: Double head uses 25W + 3W ambient light.



2. Photocell:

• Turn to the left to turn off the light control function, and when it is adjusted to the far right, less daylight is required to activate the photocell.



3. Adjustable Hold Time:

- Test: test mode
- 1M: the light stays on for 1 minute upon motion being sensed.
- 5M: the light stays on for 5 minutes upon motion being sensed.



4. Motion Sensor:

· Adjusts the sensitivity to motion being detected. Left is less sensitive. Right is the most sensitive.



Motion Sensor

5. 3-CCT Selectable:

• Set the light color temperature. 3000k/4000k/5000k.

