


## DMX Decoder

AL-60-03-0007



## WIRING DIAGRAMS

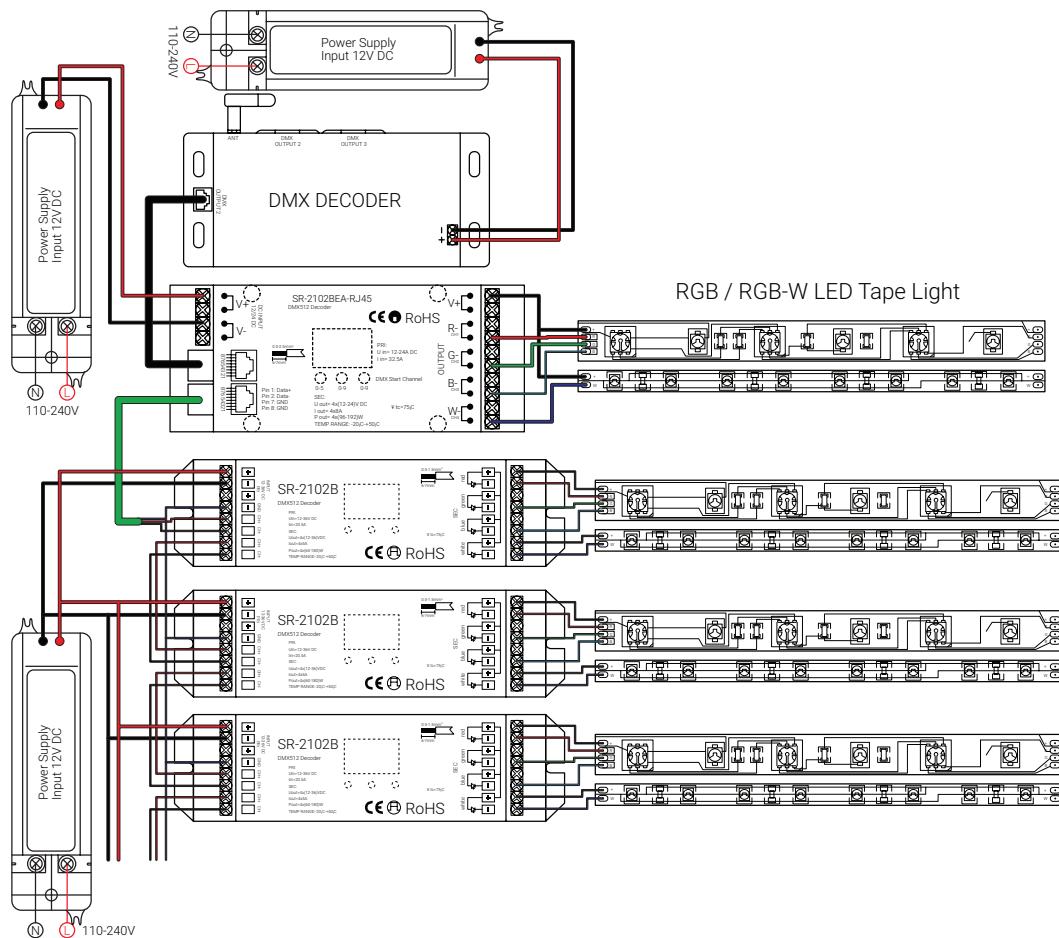

The DMX Decoder translates the digital signals from DMX color controllers, such as the Nicolaudie series, into the analog signal used by Radialux™ RGB and RGB-W 24V LED tape lights. This powerful decoder supports large installations with a clean, consistent signal and is also easy to address with the digital interface.

- Input Voltage: 12-36V DC
- Max. Wattage: 8A per channel
- Output Voltage: 192W (24V)
- Constant Voltage
- Dimensions: 6.4 x 2.4 1.3 in.
- Power Source: 24V Non-Dimmable Driver

Maximum total amount of tape that can be connected to the DMX Decoder (note: observe max. run lengths for individual sections as stated on Radialux tape specification sheets):

- Radialux 2.2 RGB: 262 ft.
- Radialux 4.4 RGB: 131 ft.
- Radialux 4.4 RGB-W: 87 ft.

 
## OPERATION

To set desired DMX Decoder address through buttons,

**Button A** is to set "hundreds" position,

**Button B** is to set "tens" position,

**Button C** is to set "unit" position.



### Set DMX address (Factory default DMX address is 001)

Press and hold down any of the 3 buttons for over 3 seconds, digital display flashes to enter into address setting, then keep short pressing button A to set "hundreds" position, button B to set "tens" position, button C to set "units" position, then press and hold down any button for >3 seconds to confirm the setting.



**DMX signal indicator ● :** When DMX signal input is detected, the indicator on the display following after the digit of "hundreds" position of DMX address turns on red 0.0.1. If there is no signal input, the dot indicator will not turn on, and the "hundreds" position of DMX address will flash.



### Choose DMX Channel (Factory default DMX channel is 4CH)

Press and hold down both buttons B+C simultaneously for over 3 seconds, CH digital display flashes, then keep short pressing button A to choose 1/2/3/4, which means total 1/2/3/4 channels. Press and hold down button A for >3 seconds to confirm the setting. Factory default is 4 DMX channels.

For example the DMX address is already set as 001.

1CH=1 DMX address for all the output channels, which all will be address 001

2CH=2 DMX addresses , output 1&3 will be address 001, output 2&4 will be address 002

3CH=3 DMX addresses, output 1, 2 will be address 001, 002 respectively, output 3&4 will be address 003

4CH=4 DMX addresses, output 1, 2, 3, 4 will be address 001, 002, 003, 004 respectively



### Choose PWM frequency (Factory default PWM frequency is PF1 1 KHz)

Press and hold down both buttons A+B simultaneously for over 3 seconds, digital display will show PF1, PF means output PWM frequency, the digit 1 will flash, which means frequency, then keep short pressing button C to select a frequency from 0-9 and A-L, which stand for following frequencies:


0=500Hz, 1=1 KHz, 2=2KHz, ... , 9=9KHz, A=10KHz, B=12KHz, C=14KHz, D=16KHz, E=18KHz, F=20KHz, H=25KHz, J=35KHz, L=200Hz.

Then press and hold down button C for >3 seconds to confirm the setting.



### Choose Dimming Curve Gamma Value (Factory default dimming curve value is g1 .0)

Press and hold down all buttons A+B+C simultaneously for over 3 seconds, digital display flashes g1 .0, 1.0 means the dimming curve gamma value, the value is selectable from 0.1-9.9, then keep short pressing button B and button C to select corresponding digits, then press and hold down both buttons B+C for >3 seconds to confirm the setting.

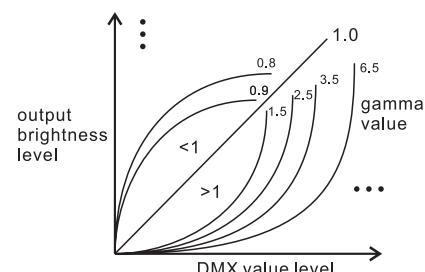



## Firmware OTA update

You will get this after power on the decoder, it means this decoder supports firmware OTA update function. This function can be used when there is a firmware update from the manufacturer, the update can be executed through a Windows computer and an USB to serial port converter, the converter will connect the computer and the decoder's hard wire DMX port. A software RS485-0TW on the computer will be used to push the firmware to the decoder.

Connect the computer and the decoder through the USB to serial port converter, if you need to update multiple decoders' firmware, connect the converter to first decoder's DMX port, then connect other decoders to the first decoder in daisy chain through the DMX port. Please do not power on the decoders.

Run the OTA tool RS485-0TW on the computer, select the correct communication port "USB-SERIAL", baud rate "250000", and data bit "9", use default settings for other configurations. Then click "file" button to select the new firmware from the computer, then click "Open Port", the firmware will be loaded. Then click "Download Firmware", the right side state column of the OTA tool will show "send link". Then power on the decoders before "wait erase" displaying on the state column, the digital display of the decoders will show **RP.1**. Then "wait erase" will show on the state column, which means the updating starts. Then the OTA tool starts writing data to the decoders, the state column will show the progress, once writing data finishes, the digital display of the decoders will flash **RP.1**, which means firmware updated successfully.

## Restore to Factory Default Setting

Press and hold down both buttons A+C for over 3 seconds until the digital display turns off and then turns on again, all settings will be restored to factory default.

Default settings are as follows:

DMX Address: 001

DMX Address Quantity: 4CH

PWM Frequency: PF1

Gamma: g1 .0

## RDM Discovery Indication:

When using ROM to discover the device, the digital display will flash and the connected lights will also flash at the same frequency to indicate. Once the display stops flashing, the connected light also stops flashing.

## The supported RDM PIDs are as follows:

DISC\_UNIQUE\_BRANCH

DISC\_MUTE

DISC\_UN\_MUTE

DEVICE\_INFO

DMX\_START\_ADDRESS

IDENTIFY\_DEVICE

SOFTWARE\_VERSION\_LABEL

DMX\_PERSONALITY

DMX\_PERSONALITY\_DESCRIPTION

SLOT\_INFO

SLOT\_DESCRIPTION

MANUFACTURER\_LABEL

SUPPORTED\_PARAMETERS

## SAFETY AND WARNINGS

---

- This product should be installed and serviced by a qualified technician.
- Do not expose this unit to water. When installed outdoors, ensure it is mounted in a waterproof enclosure.
- Always mount this unit in an area with proper ventilation to avoid overheating.
- Never connect any cables while power is on.
- Before switching power on, ensure connections are correct to avoid short circuits.

## TROUBLESHOOTING

---

- Check that the output voltage of any LED power supplies used comply with the working voltage of the product.
- Ensure that all cable connections are secure.