

## J-TRACK SYSTEM ZOOMABLE LED HEAD - 5 CCT SELECTABLE LR43885, LR43886

**IMPORTANT: READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE.**

**SAFETY:** FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE TO LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

**WARNING:** RISK OF ELECTRIC SHOCK OR PERSONAL INJURY. DO NOT TOUCH OR REMOVE THE TRACK HEAD ON THE TRACK WHEN THE LIGHT IS ON. TURN OFF POWER BEFORE INSTALLATION OR MAINTENANCE.

### INSTRUCTIONS

1. BEFORE INSTALLING THE TRACK HEAD, REFER TO THE TRACK INSTALLATION INSTRUCTIONS TO MAKE SURE THE TRACK HEAD AND THE TRACK ARE COMPATIBLE.

2. TURN OFF SWITCH AT MAIN POWER SOURCE BEFORE INSTALLING ANY TRACK OR FITTING.

3. PULL DOWN THE LOCKING LEVER AND INSERT "ADAPTER CONTACT" INTO THE SLOT IN THE TRACK.

4. ROTATE THE ADAPTER CLOCKWISE 90° TO LOCKED POSITION.

**NOTE:** POLARITY LINE OF TRACK HEAD (2 PRONG SIDE) MUST POINT TOWARDS THE POLARITY LINE ON THE TRACK (INTENDED LINE) WHEN INSTALLED.

5. ADJUST THE CCT SWITCH BEHIND TO SELECT THE APPROPRIATE COLOR TEMPERATURE.

6. TO REMOVE, PRESS THE LOCKING LEVER ON THE TRACK ADAPTER AND TURN THE TRACK HEAD COUNTER CLOCKWISE 90°.

