

80W & 160W LED ADJUSTABLE WALLPACK - 3CCT & 3 WATTAGE SELECTABLE LR40543, LR40545

IMPORTANT


READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

The fixture must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


WARNING

Make certain power is OFF before installing or maintaining fixture.
No user serviceable parts inside.
Do not use an electric generator to test LED fixtures.
Min 90°C SUPPLY CONDUCTORS.


2. OPEN THE G1/2 PLUG COVER OF THE FIXTURE BOTTOM SHELL AND USE TOOLS TO DRILL THROUGH THE 4 FIXING HOLES A, B, C, D

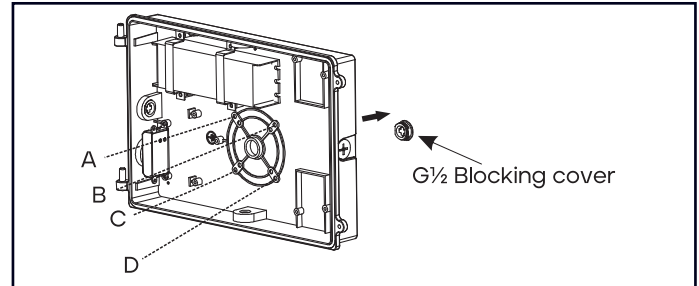



3. LEAD THE MAINS WIRES OF THE JUNCTION BOX INTO THE INTERIOR OF THE FIXTURE, AND THEN FIX THE BOTTOM SHELL OF THE FIXTURE TO THE JUNCTION BOX.

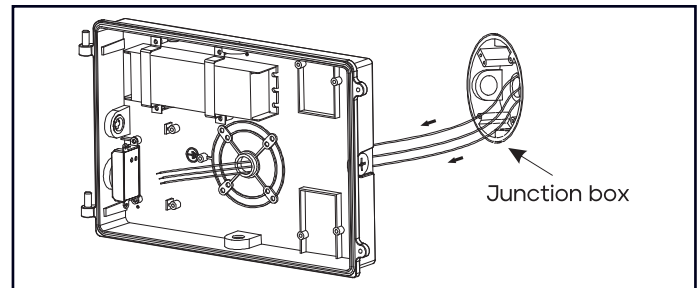

4. CONNECT THE MAINS POWER LINE AND THE FIXTURE DRIVER LINE ACCORDINGLY, AND PLUG THE MALE AND FEMALE TERMINALS TOGETHER. THEN PUT THE FIXTURE HOUSING AND BOTTOM SHELL TOGETHER AND TIGHTEN THE TWO FASTENING SCREWS.

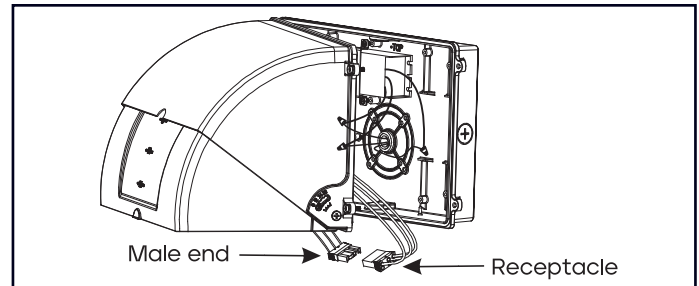


5. THE POSITION OF THE LIMIT SCREW CAN BE ADJUSTED AS NEEDED, AND THE FIXTURE CAN BE ADJUSTED TO AN ANGLE OF 0°-12°-24°-36°.

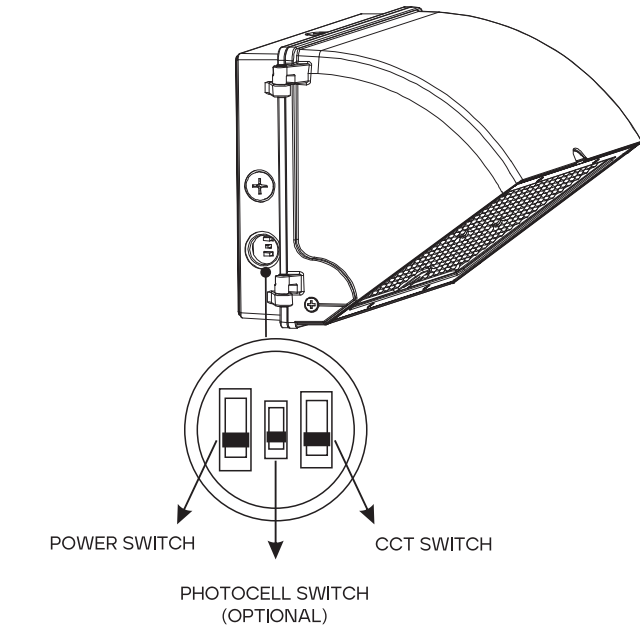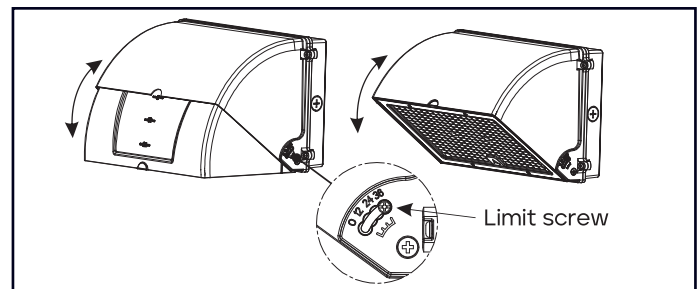

JUNCTION BOX INSTALLATION


1. LOOSEN THE TWO FASTENING BOLTS ON THE MAIN BODY, UNPLUG THE MALE AND FEMALE CONNECTORS, AND REMOVE THE FIXTURE HOUSING.

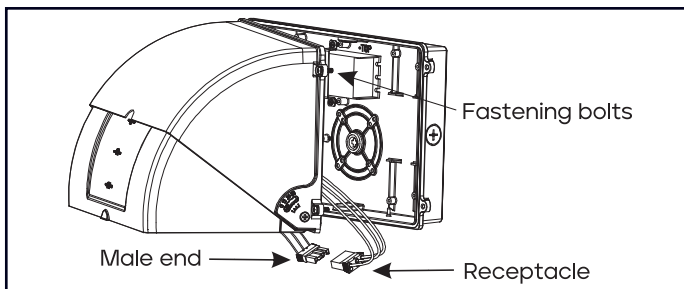


80W & 160W LED ADJUSTABLE WALLPACK - 3CCT & 3 WATTAGE SELECTABLE LR40543, LR40545

HOSE INSTALLATION


1. LOOSEN THE TWO FASTENING BOLTS ON THE MAIN BODY, UNPLUG THE MALE AND FEMALE CONNECTORS, AND REMOVE THE FIXTURE HOUSING.

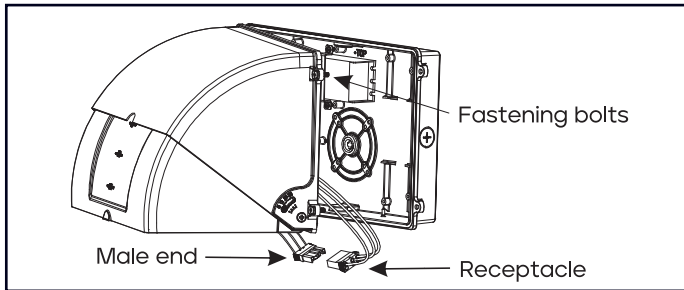


2. OPEN THE G1/2 PLUG COVER ON THE RIGHT SIDE OF THE FIXTURE BOTTOM SHELL, USE TOOLS TO OPEN THE E, F, G 3 FIXING HOLES, AND FIX THE FIXTURE BOTTOM SHELL WITH SCREWS.

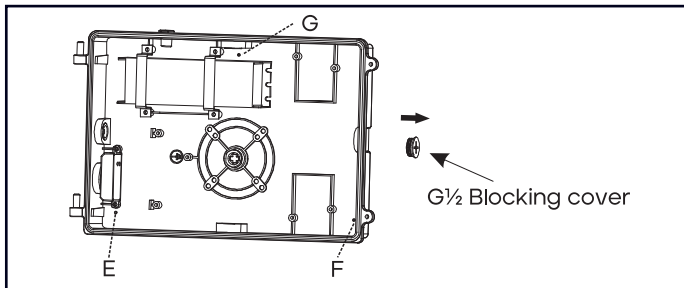


3. INSERT THE HOSE INTO THE SIDE HOLE AND INTRODUCE THE MAINS WIRE INTO THE FIXTURE BODY THROUGH THE HOSE.

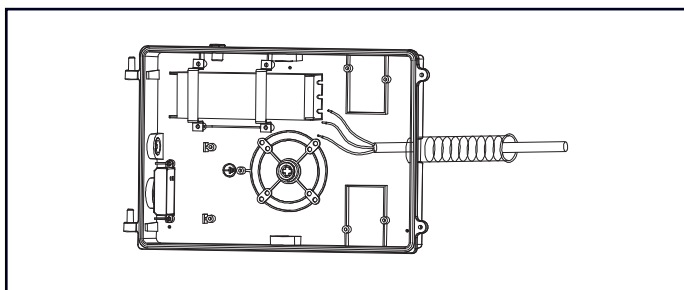

4. CONNECT THE MAINS POWER LINE AND THE FIXTURE DRIVER LINE ACCORDINGLY, AND PLUG THE MALE AND FEMALE TERMINALS TOGETHER. THEN PUT THE FIXTURE HOUSING AND BOTTOM SHELL TOGETHER AND TIGHTEN THE TWO FASTENING SCREWS.

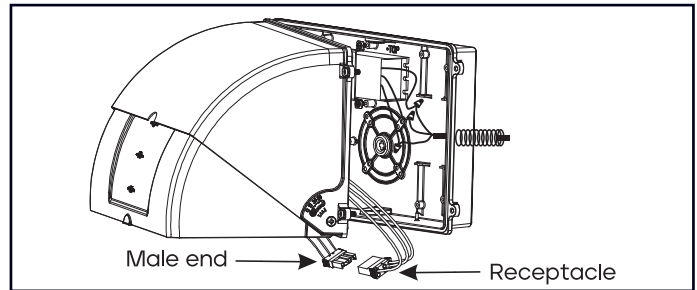

5. THE POSITION OF THE LIMIT SCREW CAN BE ADJUSTED AS NEEDED, AND THE FIXTURE CAN BE ADJUSTED TO AN ANGLE OF 0°-12°-24°-36°.

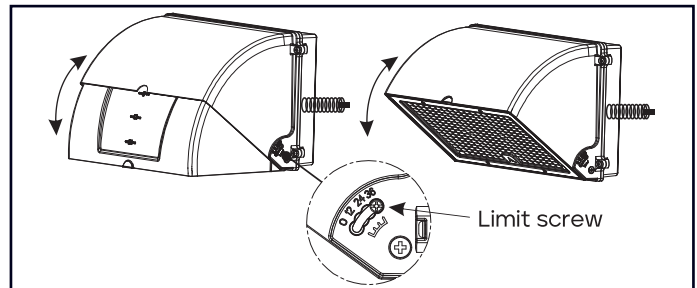

WIRING DIAGRAM

Universal voltage driver permits operation at 120V-277V or 120V-347V or 277V-480V 50 or 60 Hz. For 0-10 Dimming, follow the wiring directions

1. Connect the Black/Brown fixture lead to the LINE supply lead.
2. Connect the White/Blue fixture lead to the COMMON supply lead.
3. Connect the Green/Yellow wire from the fixture to supply ground. Do NOT connect GROUND of the dimming fixture to the output.
4. Connect the purple fixture lead to the DIM V+ lead.
5. Connect the pink fixture lead to the DIM V- lead.

