
Coronet®

CDL3

INSTALLATION GUIDE

Risk of fire and electrical shock. In accordance with national local building and electrical codes, CORONET lighting fixtures must be installed by a qualified electrician. Disconnect power at electrical panel before servicing.

1: Housing Installation

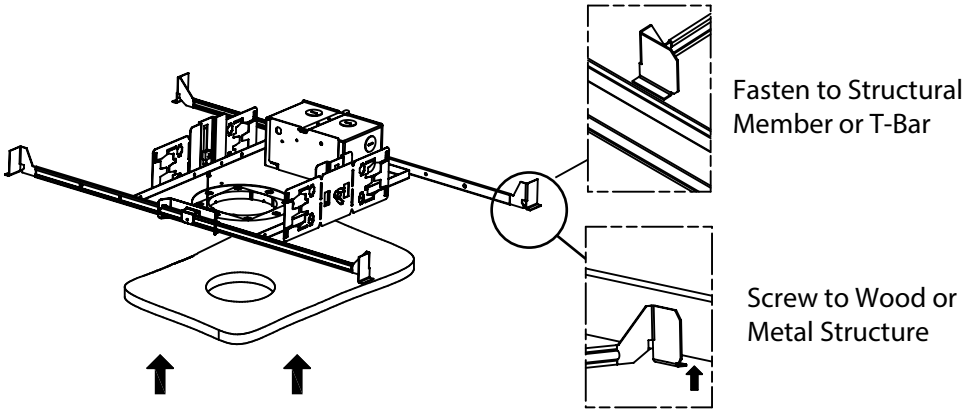


Fasten to Structural Member or T-Bar

Screw to Wood or Metal Structure


Fastening hardware by others


The flange on the bottom of the hanger bar is meant to go directly underneath the wood joist


For millwork version, place the collar on the ceiling and fix it with provided set screws

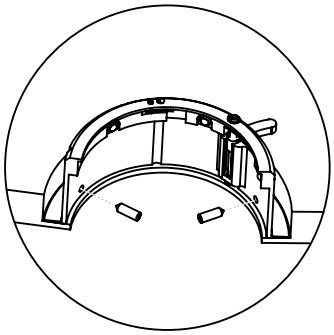

Make electrical connection inside jbox using local code guidlines.

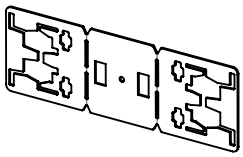

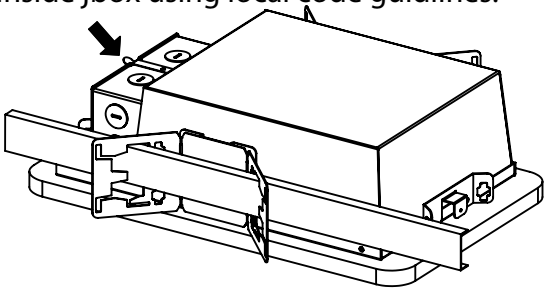

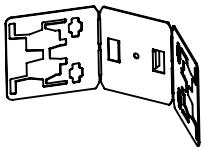



IF using the butterfly brackets, first bend them out, then install C channel or similar support material provided by others

2: Ceiling Cut Out


Round: Ø3.8″


Square: 3.8″ × 3.8″

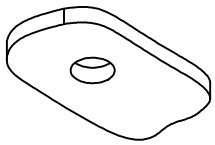

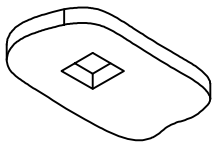


Millwork Ceiling Cut Out:

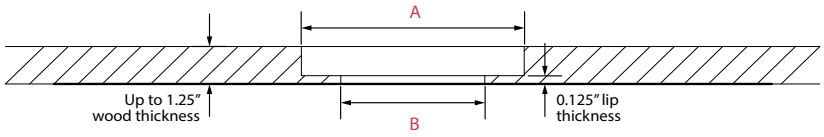

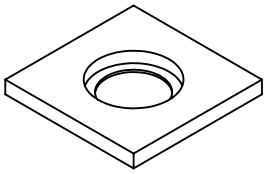

Round

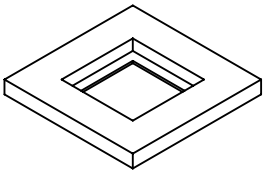

Square

	A Collar Opening	B Trim Opening
Round	Ø4.34″	Ø3.35″
Square	4.37″x4.37″	3.31″x3.31″

NOTE: JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURAL MEMBER INSIDE THE CEILING BEFORE PROCEEDING WITH INSTALLATION.


CORONET, Inc.
55 Shepherds Ln
Totowa, NJ 07512

T 973 345 7660
F 973 345 8705


CORONET, Inc. reserves the right to make any design changes for continuous improvement which will not affect the overall appearance or performance. All fixtures to be wired by a certified electrician only.

Risk of fire and electrical shock. In accordance with national local building and electrical codes, CORONET lighting fixtures must be installed by a qualified electrician. Disconnect power at electrical panel before servicing.


3: Install Collar after ceiling installation

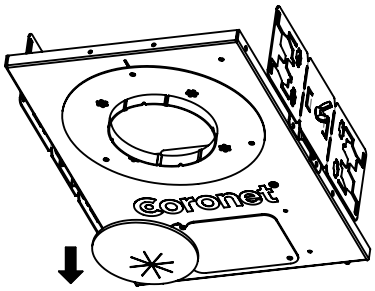


1. Remove housing cover

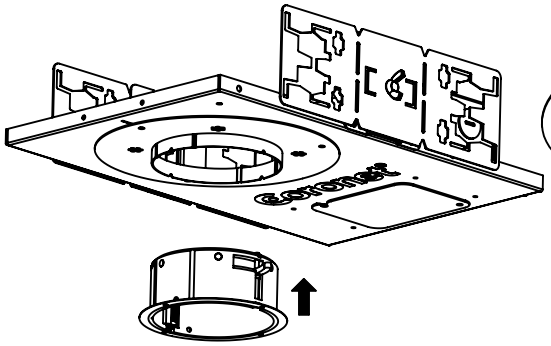


2. Install the collar

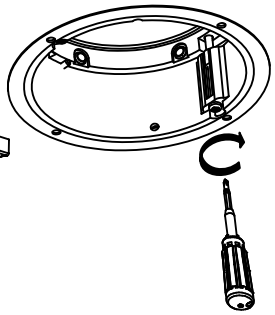

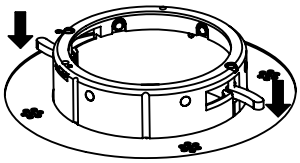


3. Using a #2 philips screwdriver, tighten the collar to the ceiling. The collar accepts ceiling thicknesses from 0.5" to 1.25".

4: Trimless Installation

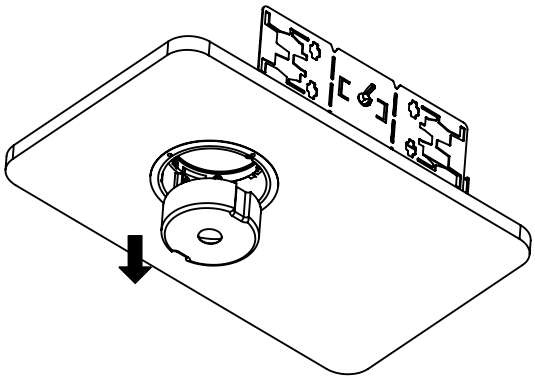



Remove the cover from the collar.

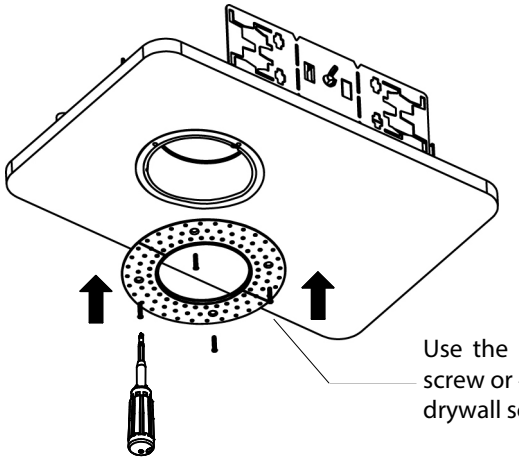

Use the provided screw or #6 1 inch drywall screws.

Please note the alignment of the perf with the holes on the collar and the lines on the perf aligning with the swing tab screws.

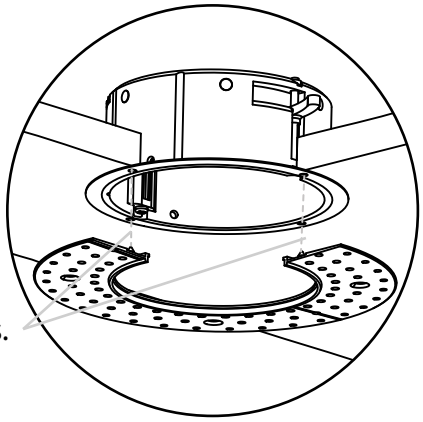

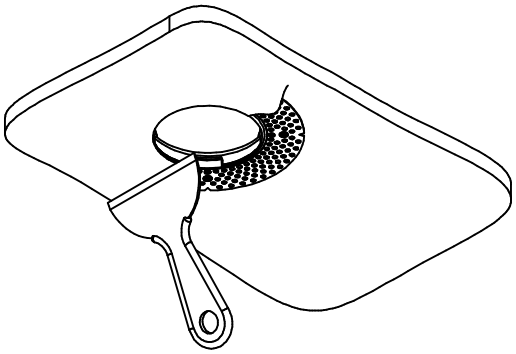


Plaster and sand over the mud plate.


NOTE: JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURAL MEMBER INSIDE THE CEILING BEFORE PROCEEDING WITH INSTALLATION.

Risk of fire and electrical shock. In accordance with national local building and electrical codes, CORONET lighting fixtures must be installed by a qualified electrician. Disconnect power at electrical panel before servicing.


5: Wiring & Module Installation

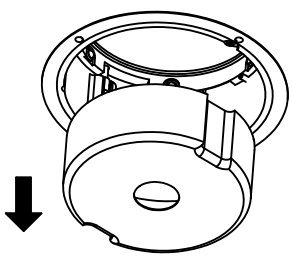

Trimmed

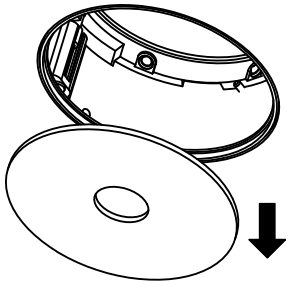


Trimless

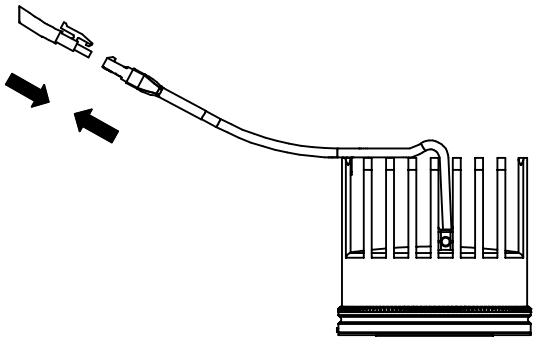


Removal of the covers for the collar
or the covers for the flange

6: Install Module

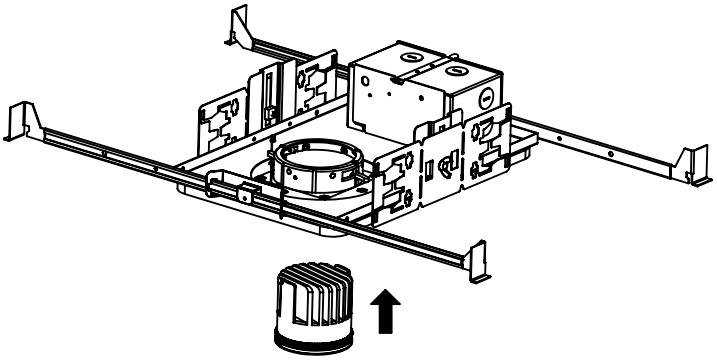

7: Install Trim

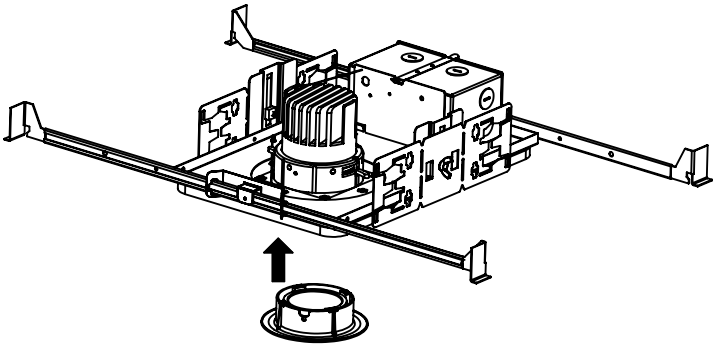

GENERAL INSTALLATION CONSIDERATIONS

Operating Temperature.....0°C to 40°C
Operating Voltage.....110VAC-277VAC, 50Hz-60Hz
Weight.....Varies based on size
Dimensions.....See spec sheet

- Installation by a certiÿed electrician only.
- Read and understand the installation instructions before attempting to install or use the fixture.
- Only use fixtures with voltage for which it is rated. Do not exceed the specified voltage and current input.
- Do not use the fixture if the housing, lens, or power cable is damaged.
- Ensure that the main power supply is off before installing or wiring the fixture.
- Method of wire connection to be determined by local electrical codes and regulations.
- The external flexible cable of this luminaire cannot be field replaced; if the cord is damaged, contact Coronet.
- The light source contained in this luminaire shall only be replaced by the lighting manufacturer or his service agent or a similar qualified person.

NOTE: JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURAL MEMBER INSIDE THE CEILING BEFORE PROCEEDING WITH INSTALLATION.