A670 HOUSE SIDE SHIELD

INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

STEP 1

To install the field installable House Side Shield place luminaire on a sturdy flat surface or leave mounted to pole top tenon.



STEP 2

Loosen four Allen head globe retaining screws.



STEP 3

Lift globe straight up and disconnect power by separating the plastic quick disconnect fittings with Black, White and Green wire leads.



STEP 4

Place supplied House Side Shield against the decorative cast ring making sure to line up pre-drilled holes with the cast mating surface. Drill the center hole first using a 3/16 drill bit.



SternbergLighting
ESTABLISHED 1923 / EMPLOYEE OWNED

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
info@sternberglighting.com
www.sternberglighting.com

11/14 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.

A670 HOUSE SIDE SHIELD


INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

STEP 5

Mount the House Side Shield using the supplied stainless steel screws starting with the center hole first.

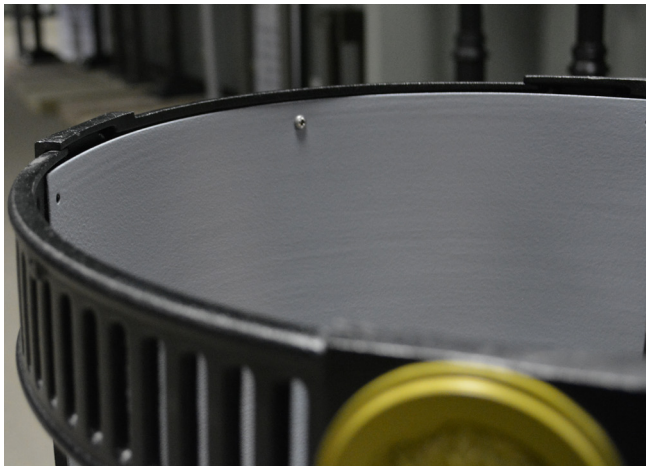

STEP 6

Repeat steps 4 and 5 with the remaining two holes.




STEP 7

Completed installation should look like the photograph.



STEP 8

Reconnect power leads and replace globe.

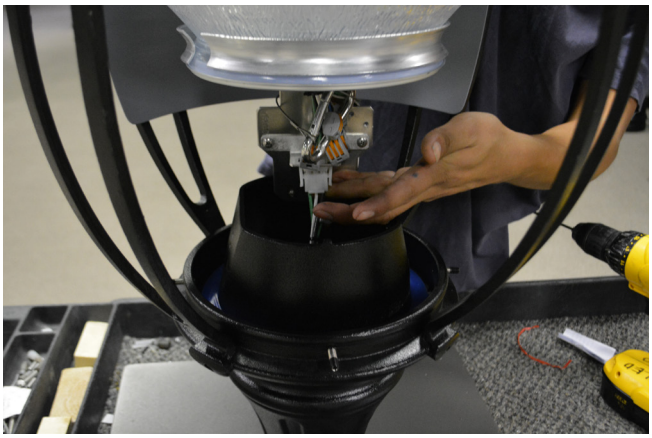

SternbergLighting
ESTABLISHED 1923 / EMPLOYEE OWNED

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
info@sternberglighting.com
www.sternberglighting.com

11/14 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.

A670 HOUSE SIDE SHIELD

INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

STEP 9

Orient “Street Side” label toward the street.



STEP 10

Tighten four Allen head screws to secure globe to fitter.



SternbergLighting

ESTABLISHED 1923 / EMPLOYEE OWNED

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
info@sternberglighting.com
www.sternberglighting.com

11/14 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.