PRODUCT: RY660 CUSTOMER INSTALLATION INSTRUCTIONS

IMPORTANT

⚠WARNING: TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.


⚠CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

A.1


REV	DESCRIPTION	ENGINEER	CHECKED BY	DATE	ECN #
A	RELEASED FOR PRODUCTION	MARCIN	CA	07/31/26	ECN 08-03-2026 MW


REVISION HISTORY

A. EXTERNAL SLIP, POLE BY STERNBERG WITH TENON (SQUARE, ROUND, OR CHAMFERED SQUARE POLES)

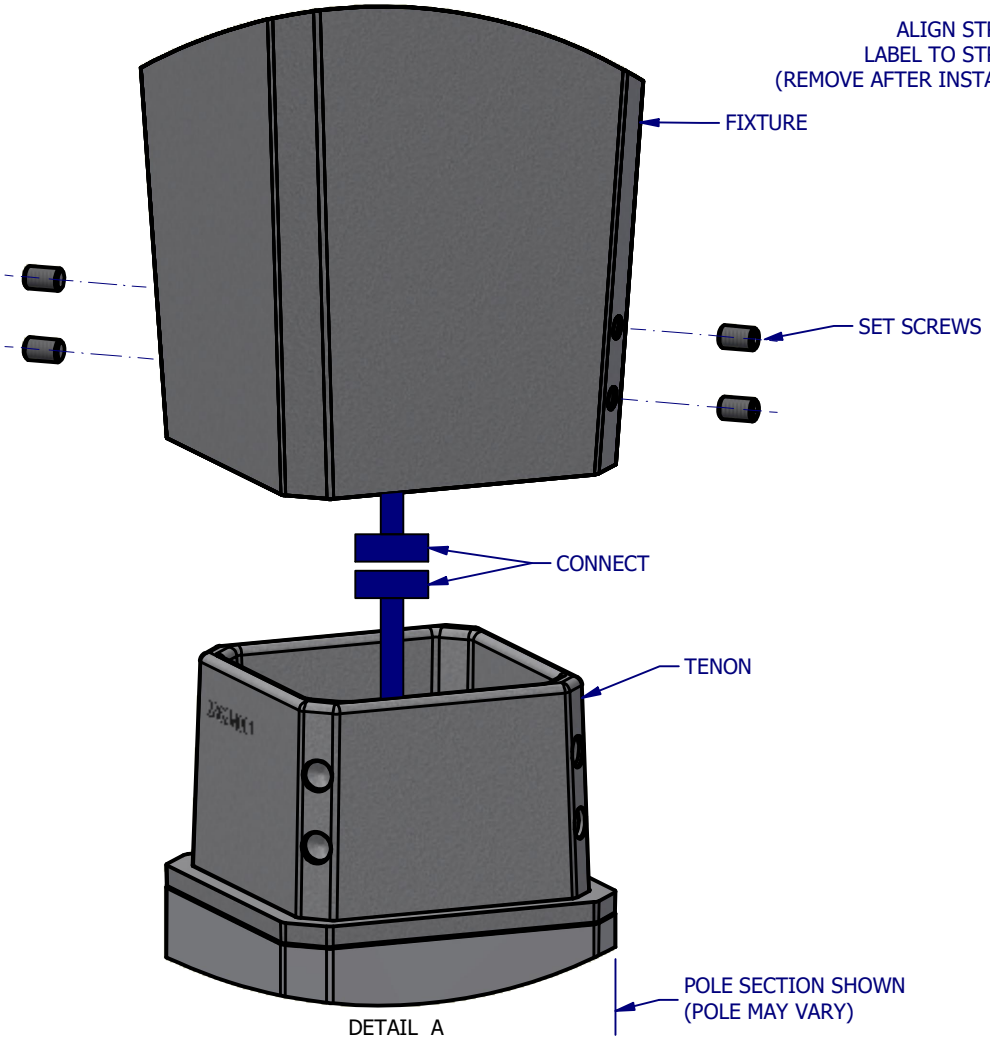

DETAIL A

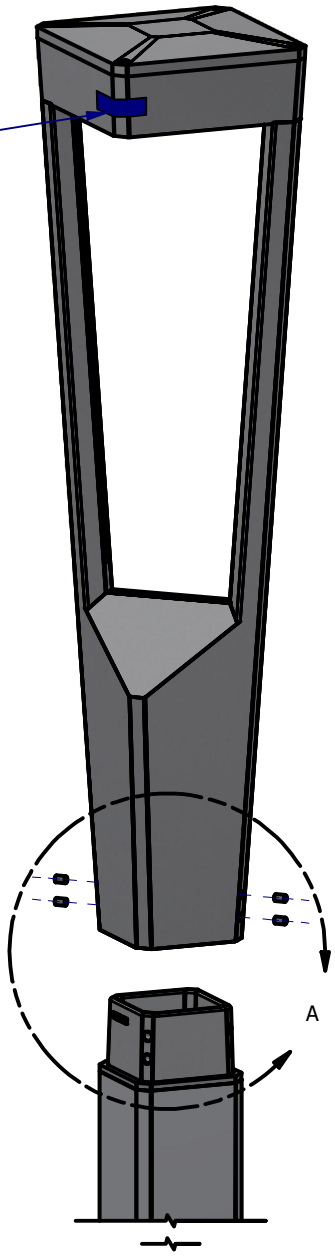

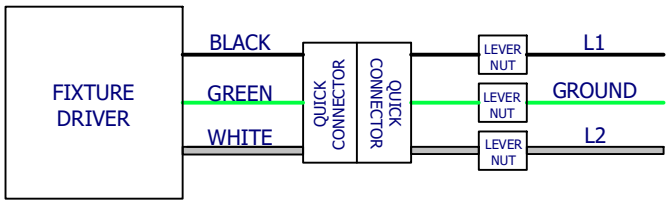



INSTRUCTIONS:


1. PULL POWER SUPPLY WIRE FROM POLE SHAFT AND CONNECT TO FIXTURE ACCORDING TO WIRE DIAGRAM.
2. ALIGN STREET SIDE LABEL TO STREET SIDE AND PLACE FIXTURE ONTO POLE TENON UNTIL SEATED FLAT.
3. FASTEN USING (4) SET SCREWS FOLLOWING AND OPPOSING FASTENING PATTERN. REMOVE STREET SIDE LABEL.


DRAWN MARCIN	DATE 7/31/2026	TITLE: RY660 INSTALLATION INSTRUCTIONS	Sternberg
CHECKED	DATE		
THIRD ANGLE PROJECTION	SIZE A	DWG NO RY660_CUSTOMER INSTALLATION INSTRUCTIONS	REV -
		SCALE	SHEET 1 OF 4


B. TENON SLIP, POLE BY OTHERS WITH TENON (SQUARE OR ROUND POLES)

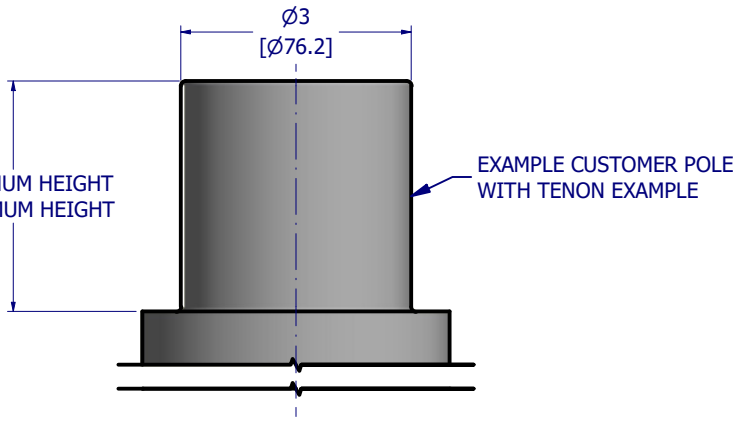

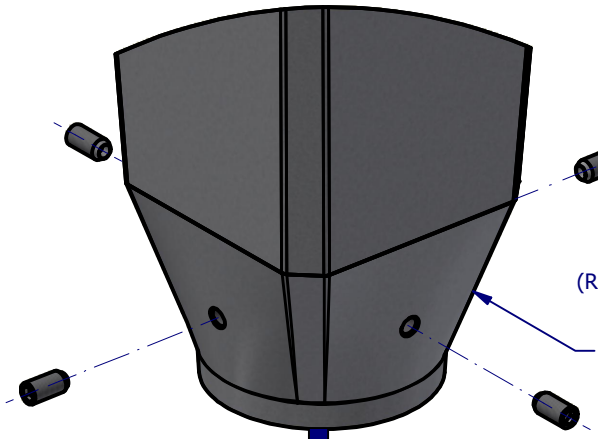


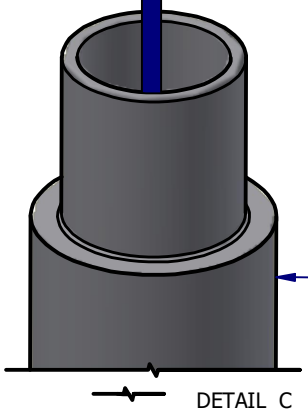

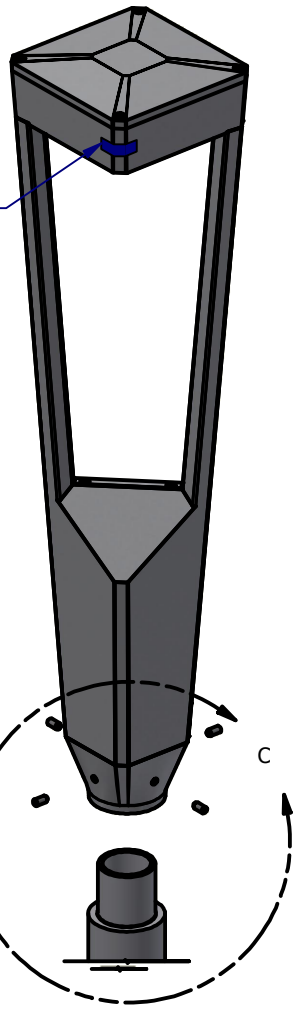

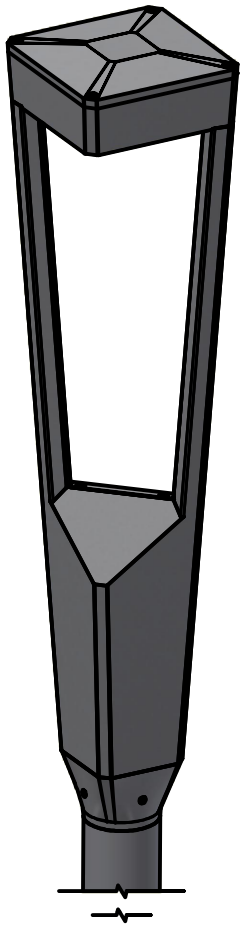

ASSEMBLED VIEW

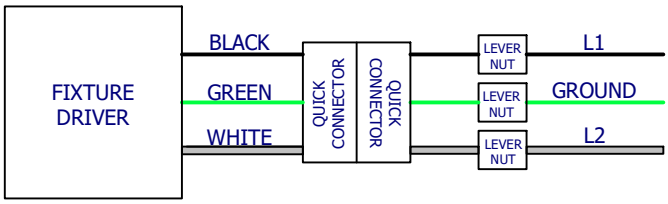


INSTRUCTIONS:


1. PULL POWER SUPPLY WIRE FROM POLE SHAFT AND CONNECT TO FIXTURE ACCORDING TO WIRE DIAGRAM.
2. ALIGN STREET SIDE LABEL TO STREET SIDE AND PLACE FIXTURE ONTO POLE UNTIL SEATED FLAT.
3. FASTEN USING (4) SET SCREWS FOLLOWING AND OPPOSING FASTENING PATTERN. REMOVE STREET SIDE LABEL.

DRAWN: MARCIN	DATE: 7/31/2026	TITLE: RY660 INSTALLATION INSTRUCTIONS	Sternberg
CHECKED	DATE		
THIRD ANGLE PROJECTION	SIZE: A	DWG NO: RY660_CUSTOMER INSTALLATION INSTRUCTIONS	REV: -
		SCALE	SHEET 2 OF 4

C. INTERNAL SLIP, POLE BY OTHERS WITH NO TENON (SQUARE OR ROUND POLES)

INTERAL SLIP FIT FITTER AND POLE GUIDE

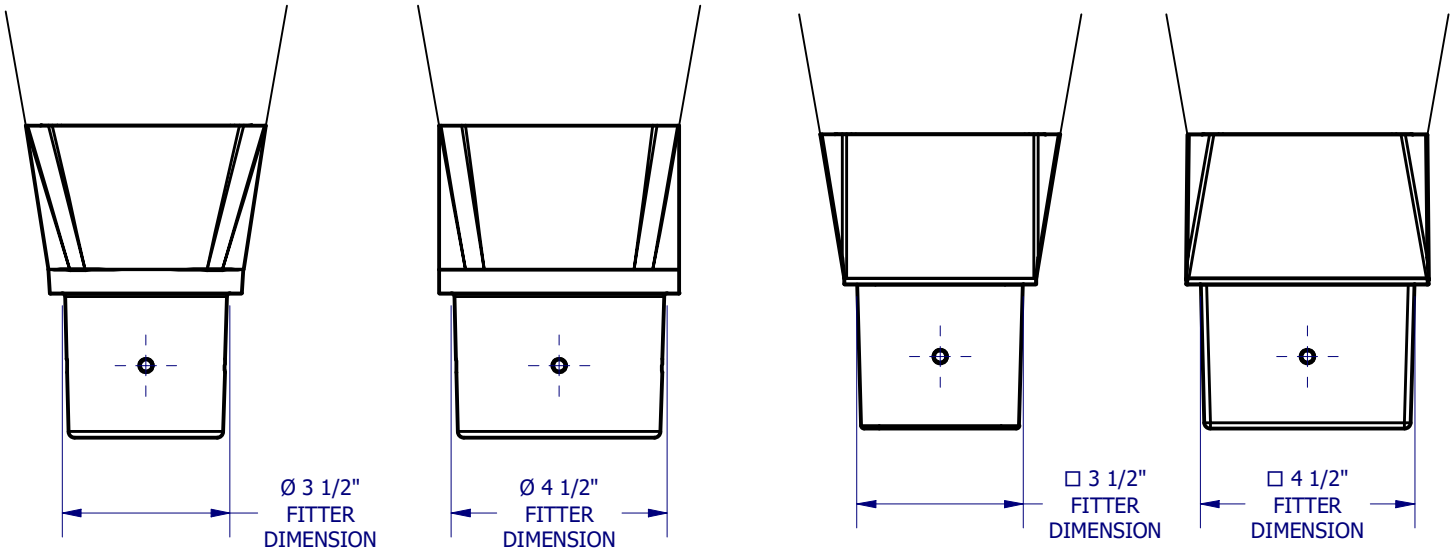


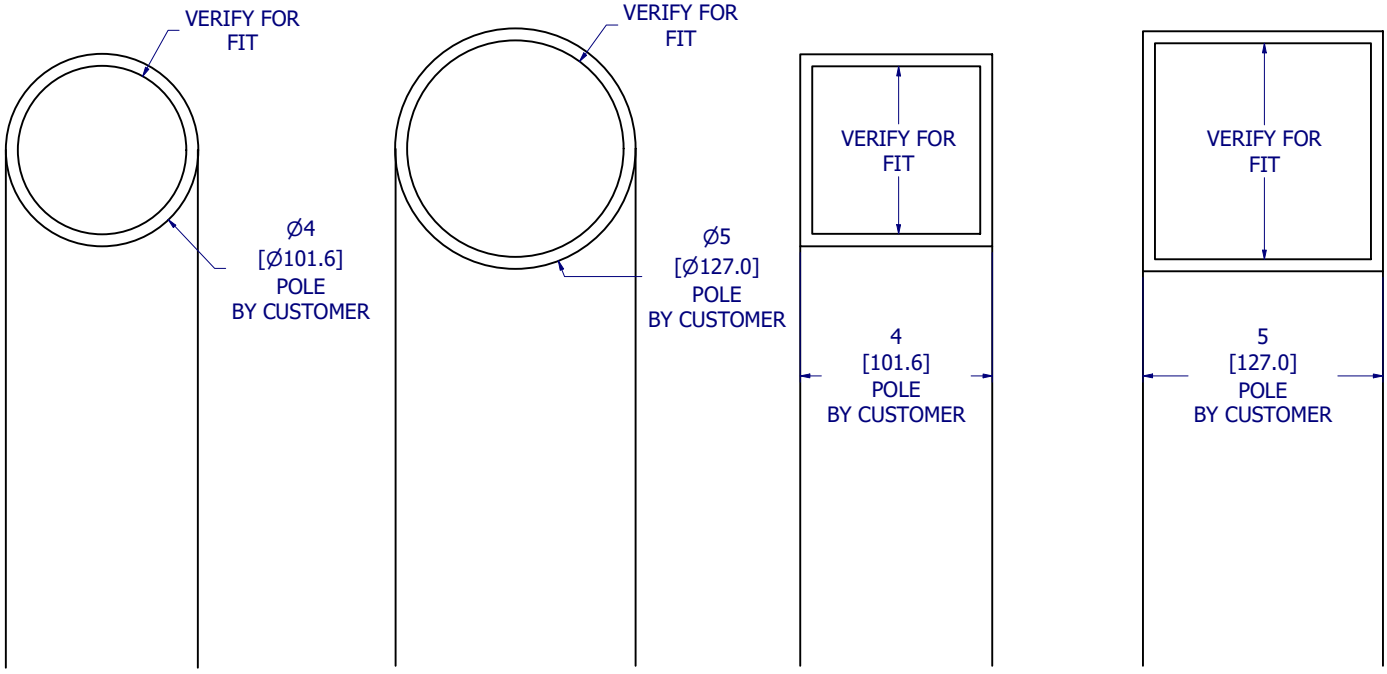



RECOMMENDED POLE WALL THICKNESS OF 3/16" OR LESS


DRAWN: MARCIN	DATE: 7/31/2026	TITLE: RY660 INSTALLATION INSTRUCTIONS	Sternberg
CHECKED	DATE		
THIRD ANGLE PROJECTION	SIZE: A	DWG NO: RY660_CUSTOMER INSTALLATION INSTRUCTIONS	REV: -
		SCALE	SHEET 3 OF 4

C. INTERNAL SLIP, POLE BY OTHERS WITH NO TENON (SQUARE OR ROUND POLES)

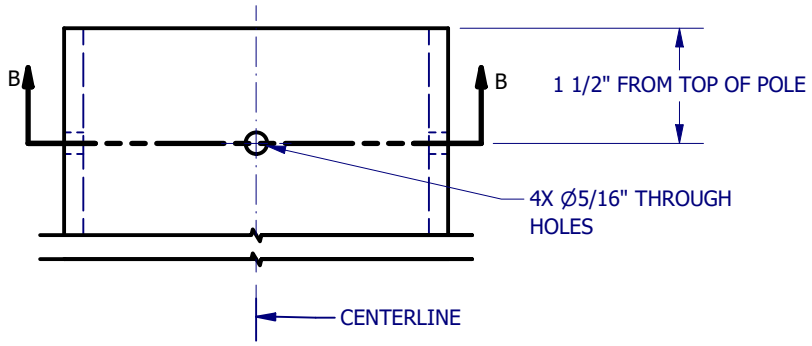


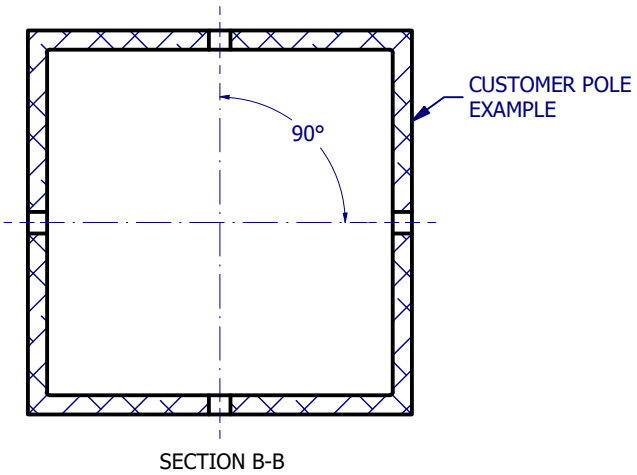

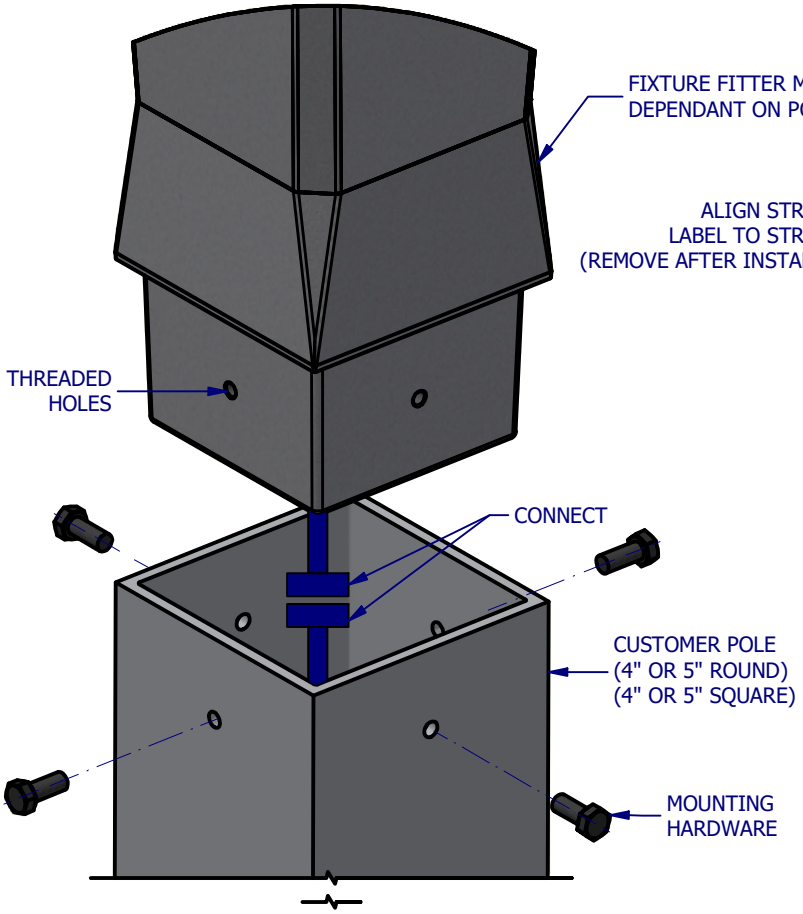

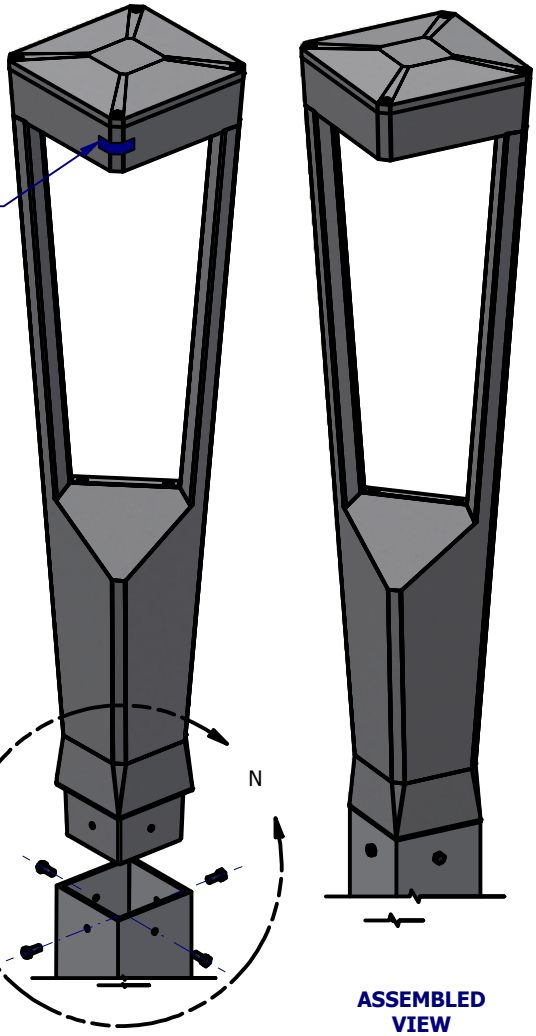

ASSEMBLED VIEW

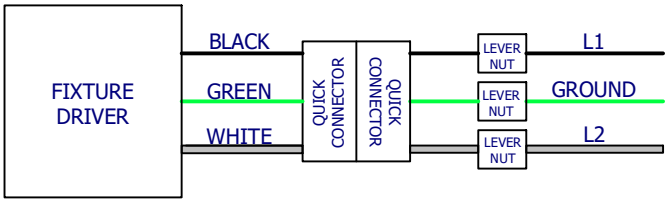

INSTRUCTIONS:

1. MEASURE AND DRILL THROUGH HOLES IN POLE ACCORDING TO ABOVE DIAGRAM. NOTE, POLE SHAPE AND SIZE MAY VARY.
2. PULL POWER SUPPLY WIRE FROM POLE SHAFT AND CONNECT TO FIXTURE ACCORDING TO WIRE DIAGRAM.
3. ALIGN STREET SIDE LABEL TO STREET SIDE AND PLACE FIXTURE ONTO POLE UNTIL SEATED FLAT.
4. FASTEN USING (4) BOLTS FOLLOWING AND OPPOSING FASTENING PATTERN. REMOVE STREET SIDE LABEL.

DRAWN: MARCIN	DATE: 7/31/2026	TITLE: RY660 INSTALLATION INSTRUCTIONS	Sternberg
CHECKED	DATE		
THIRD ANGLE PROJECTION	SIZE: A	DWG NO: RY660_CUSTOMER INSTALLATION INSTRUCTIONS	REV: -
		SCALE	SHEET 4 OF 4