

2.5" CYLINDER - SNOOT


LR43741, LR43742, LR43743, LR43744

IMPORTANT: READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE.

SAFETY: FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE TO LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

WARNING: MAKE SURE POWER IS OFF FROM THE ELECTRICAL PANEL BEFORE STARTING INSTALLATION OR ATTEMPTING ANY MAINTENANCE. INDOOR INSTALLATION ONLY.

TOOLS REQUIRED: SAW, MEASURING TAPE, ELECTRICAL WIRING (USE TAPE AND GAUGE SUITABLE FOR APPLICATION TO CONNECT THE FIXTURES).

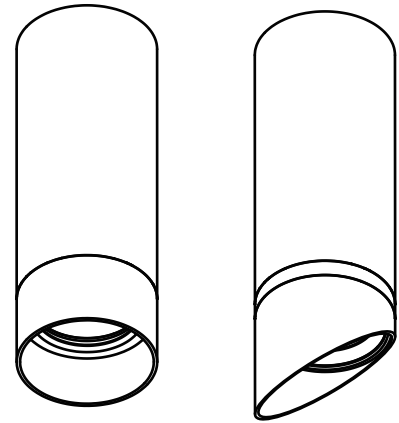

INSTRUCTIONS

1. UNSCREW THE FRONT TRIM. (9a, 10a)
2. SCREW THE OPTIONAL SNOOT IN. (9b, 10b)
3. ADJUST THE SNOOT TO THE RIGHT POSITION (IF NEEDED).
4. THE INSTALLATION IS COMPLETE (9c, 10c)

INSTRUCTIONS

