

4.5" CYLINDER - RECESSED MOUNT KIT LR43790, LR43791

IMPORTANT


READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE.

SAFETY

FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE TO LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

WARNING

MAKE SURE POWER IS OFF FROM THE ELECTRICAL PANEL BEFORE STARTING INSTALLATION OR ATTEMPTING ANY MAINTENANCE. INDOOR INSTALLATION ONLY. TOOLS REQUIRED: SAW, MEASURING TAPE, ELECTRICAL WIRING (USE TAPE AND GAUGE SUITABLE FOR APPLICATION TO CONNECT THE FIXTURES).

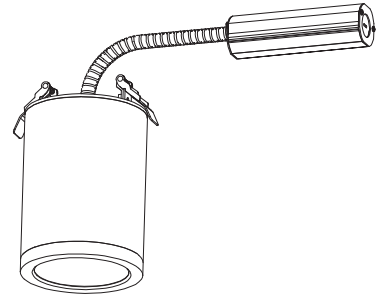

INSTRUCTIONS

1. SELECT THE DESIRED LED COLOR TEMPERATURE USING THE SWITCH INSIDE THE CYLINDER. (b)
 2. CONNECT THE QUICK CONNECTORS BETWEEN CYLINDER MODULE AND MOUNTING KIT WIRES. (c)
 3. ASSEMBLE THE LUMINAIRE BY SCREWING THE TWO PARTS (d).
- LR43790+LR43780, LR43791+LR43781
4. CUT THE APPROPRIATE HOLE INTO THE CEILING (e).
 5. MAKE ELECTRICAL CONNECTIONS BETWEEN THE LUMINAIRE AND J-BOX WIRES AS SHOWN IN (f).
 6. PUSH THE DRIVER AND SPRING TOWARDS THE BACK AND STUFF THE JUNCTION BOX INTO THE CUTOUT HOLES. SECURE THE SPRING TO THE CEILING TIGHTLY (g).
- NOTE: MAKE SURE THAT THE GASKET IS PROPERLY PLACED TO ENSURE THE WATERPROOFNESS OF THE LUMINAIRE.
7. TURN POWER BACK ON

COMPATIBLE ACCESSORIES

