


LED ARCHITECTURAL LINKABLE LINE - X-CONNECTOR LR42620, LR42621

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully before installation.
2. Installation should be in accordance with the national and local electrical laws and regulations.
3. Product should be installed by a qualified and licensed electrician.
4. DO NOT install in humid places, for dry and non-humid environments only.
5. Always turn off the power supply before installation or maintenance.
6. To reduce the risk of fire and overheating, make sure all connections are tight and secure.
7. Fixtures should not be covered with thermal insulation pads or similar materials under any circumstance.

BOX CONTENTS

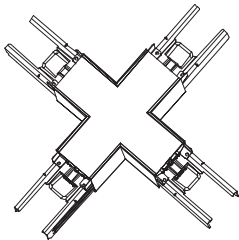

X-CONNECTOR




SCREWS



SPLICING BRACKET B


WIRING

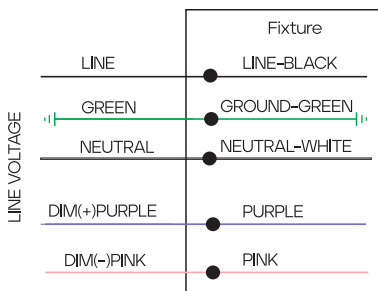


1. If dimming is not used, please separate the dimming wires with nuts.
2. Wiring must follow up the wiring diagram.
3. Remind again: Cut off the power supply before operation.

INSTRUCTIONS


1. Remove the cover from the X-Connector.

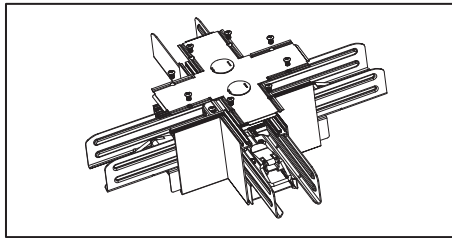


2. Remove the end cap and upper cover from fixture.

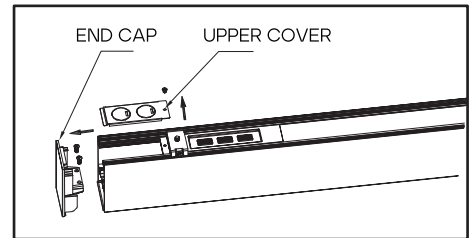


3. Slide the splicing bracket B into locating piece, then loci it with screws.

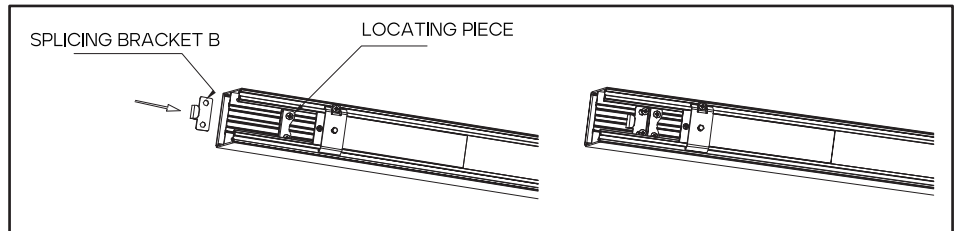


4. Make the mounting marks on the ceiling for fixtures, please refer to pendant mounting for suspending the fixture.

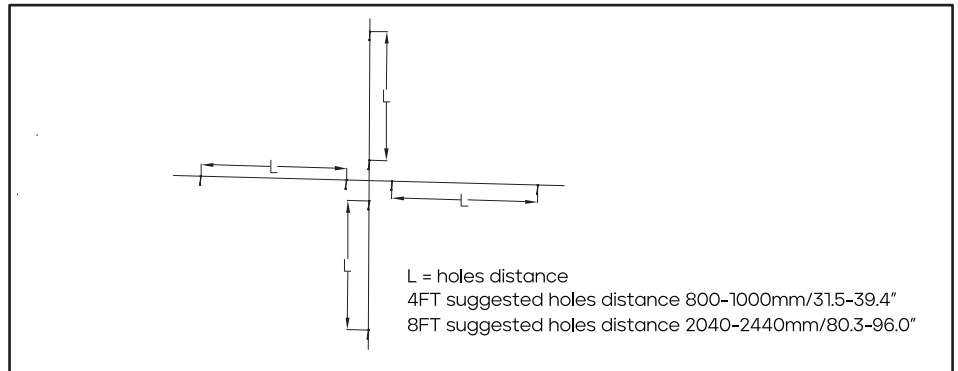


5. Adjust the lifting bracket in the fixture to a suitable position for suspending and linking.

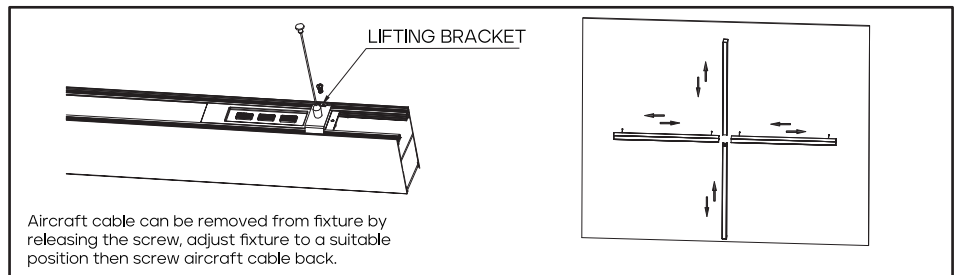


6. Insert the X-Connector into the fixtures as shown below, and pull the lock buckle to splice fixtures.

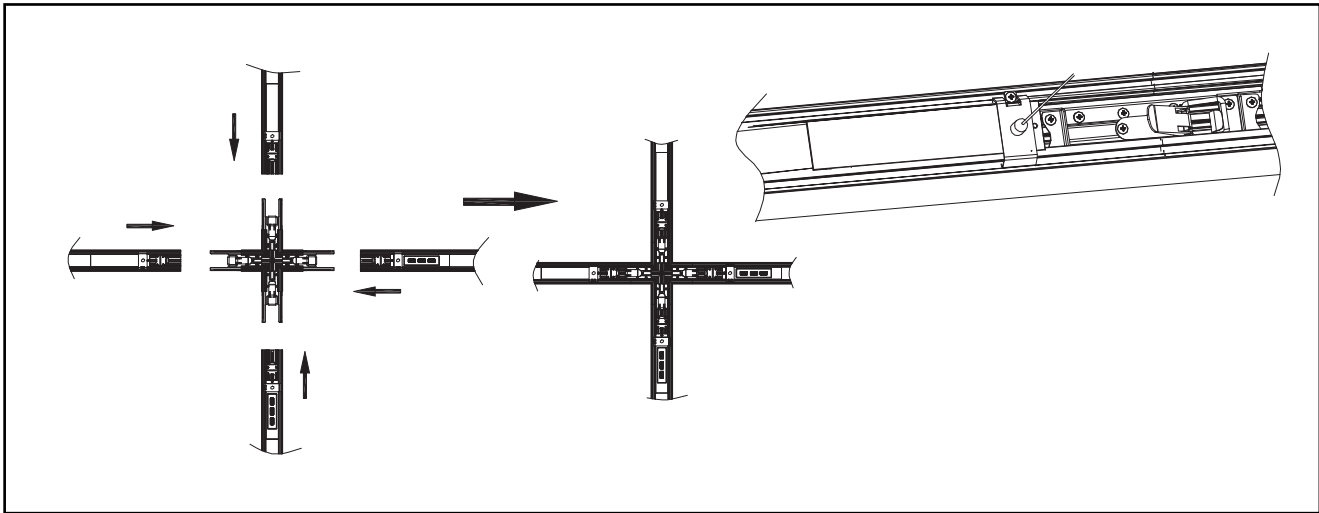


7. Make electrical connection of fixture and X-Connector with male-female connectors.

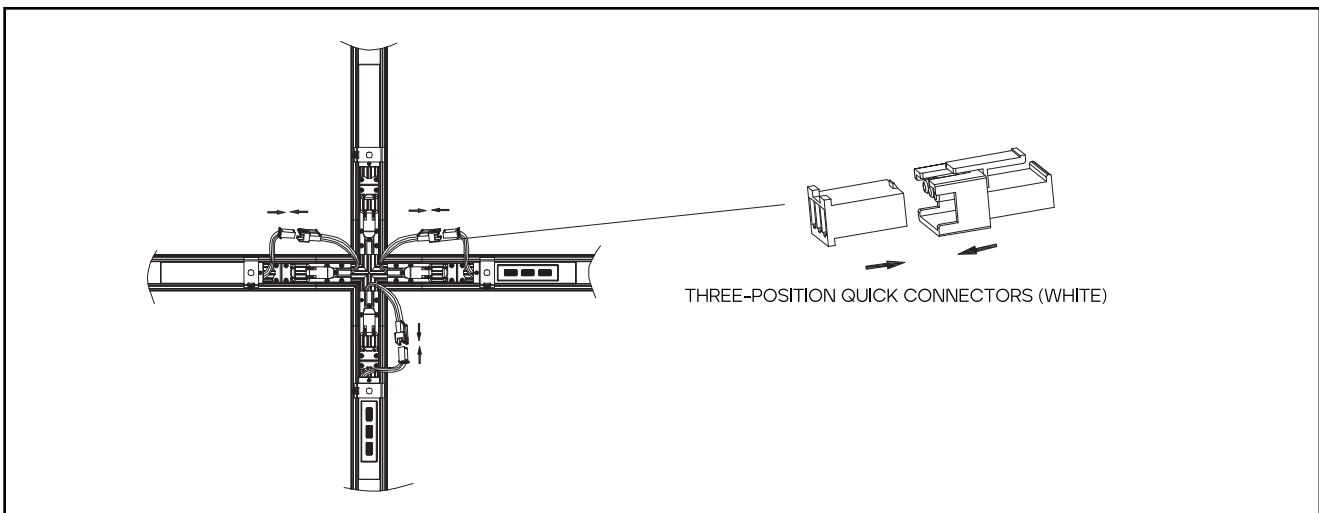


8. Cut off the connectors in one of the ends for wiring to line voltage.

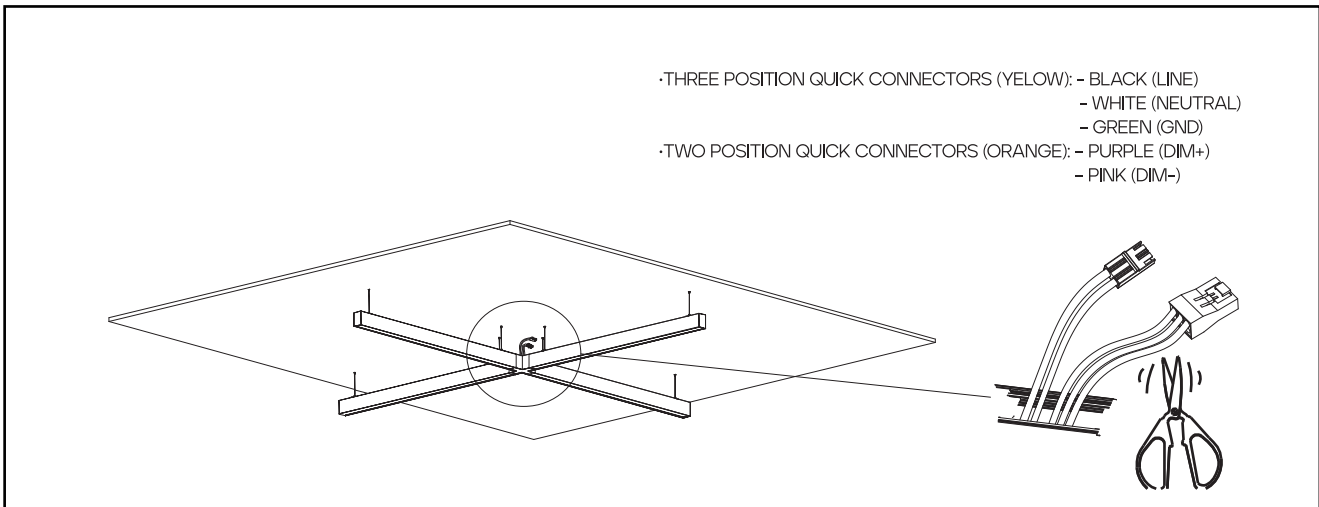

9. Screw back the cover of X-Connector, lock back the fixture upper cover, lock back the other end of fixture upper cover.

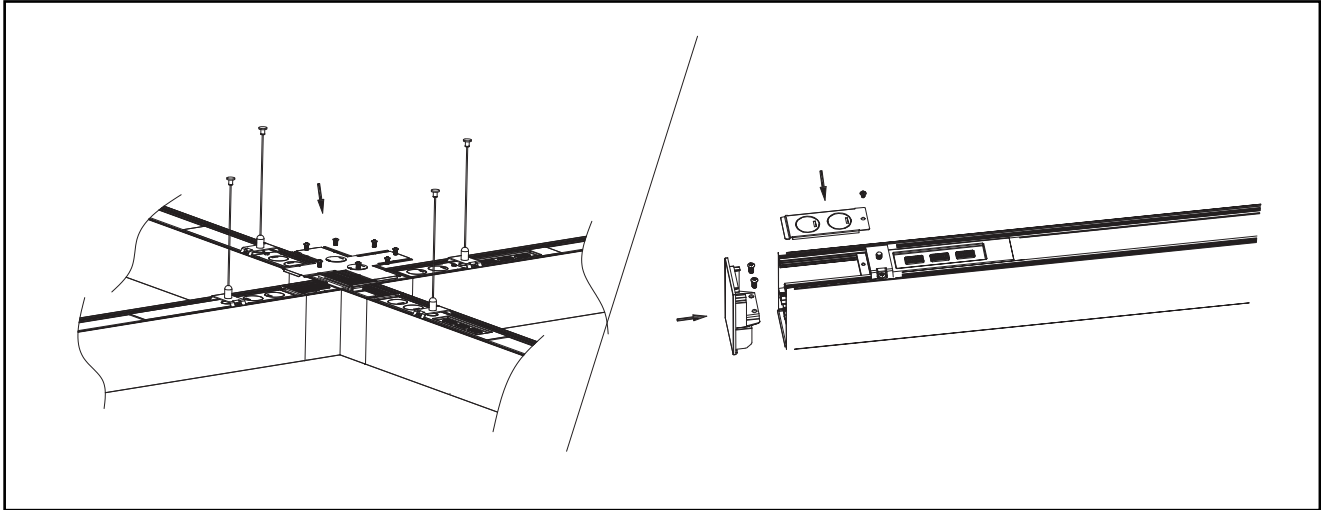

10. Wire fixtures according to wiring diagram.

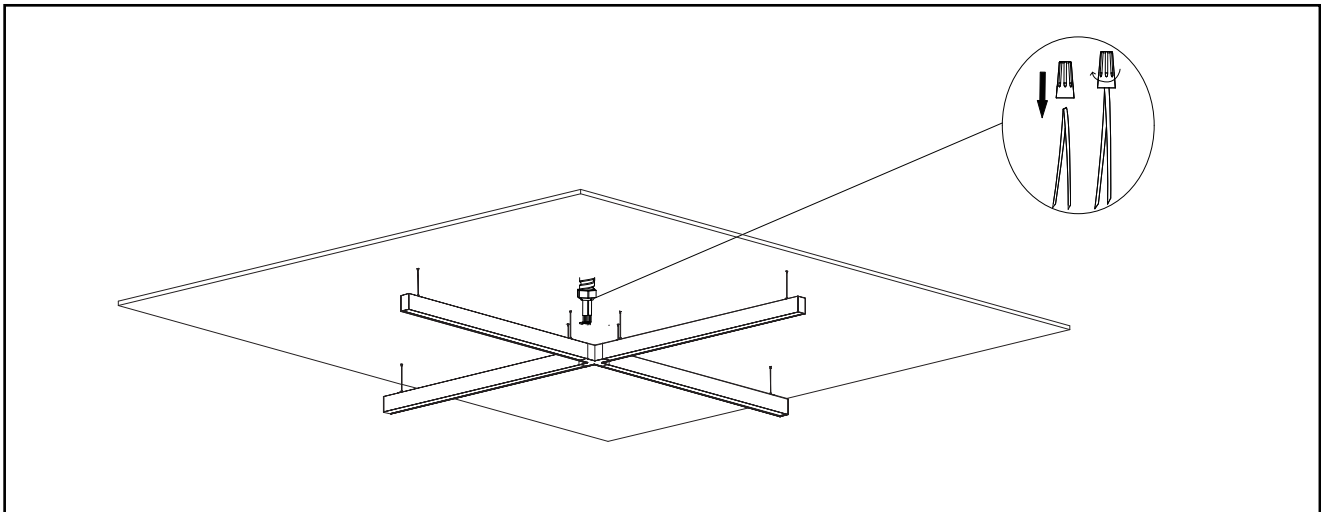

11. Installation complete.

