


ALLOY LED® Installation Instructions


Mudr® Alcove 3in. - Channel

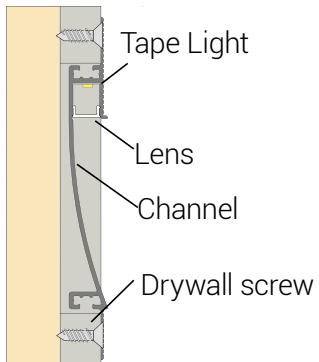


1. Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using a thicker 12 AWG wire.


2. Before installing the tape light in the channel, test the connection to power. If using a full spool of tape, connect one end of the tape to DC power and turn power on. If using a cut section of tape, attach the connector to the tape and then connect to DC power.

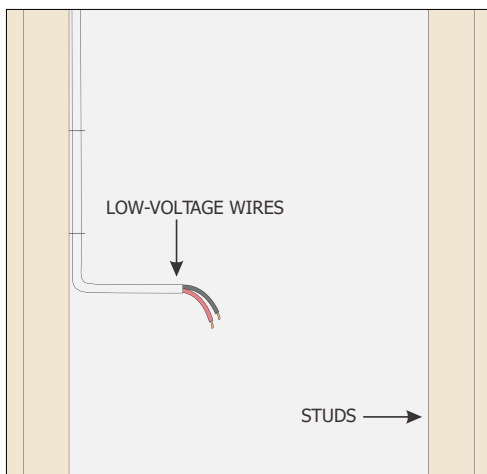


3. Bring 24V low-voltage in-wall rated wires to the desired fixture location.

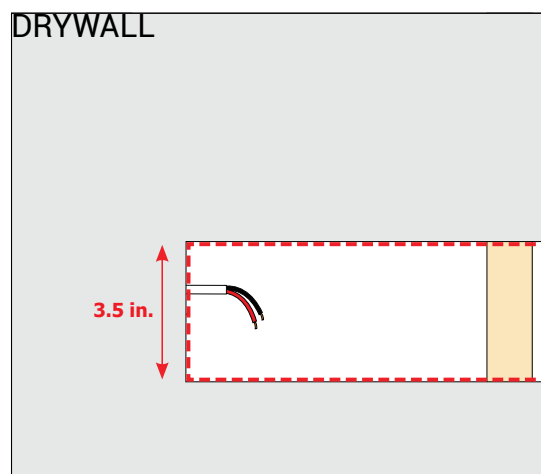

4. Cut a 3.5 opening in the drywall where you would like to mount Perifina Wall Accent.w

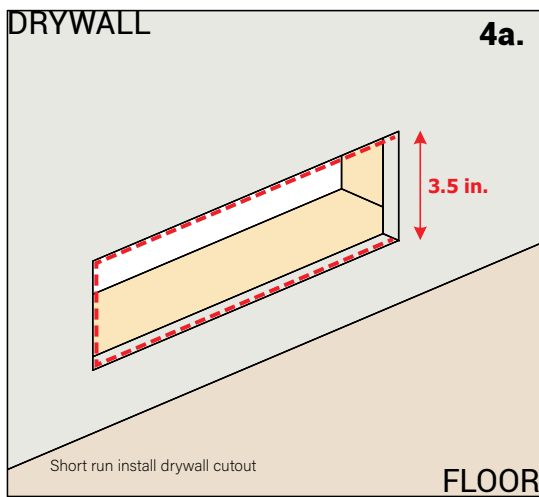


NOTE: Perifina Wall Accent 3in. can be used with 1/2" and 5/8" drywall.

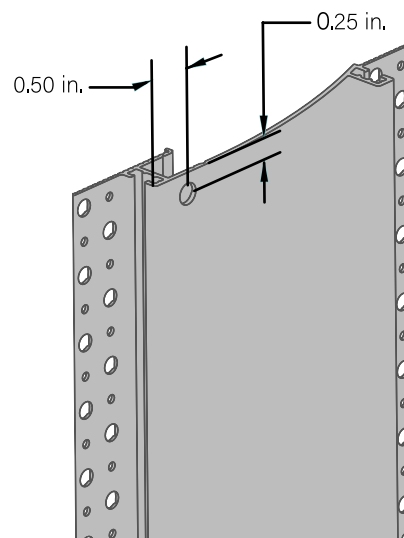


5. Drill a 1/4 inch hole in the back of the fixture. This hole will be used for power feed. Deburr sharp edges.

ALLOY LED[®] Installation Instructions


Mudr Alcove 3in. - Channel

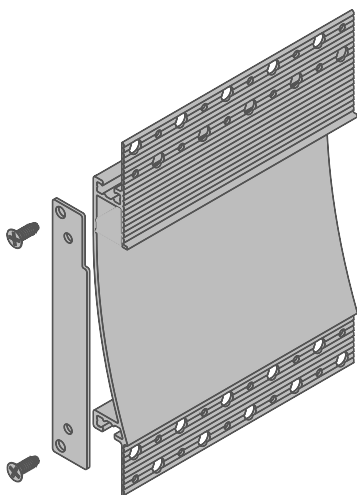


6. Fasten the Perifina Accent end caps with the provided flat head screws on both ends.

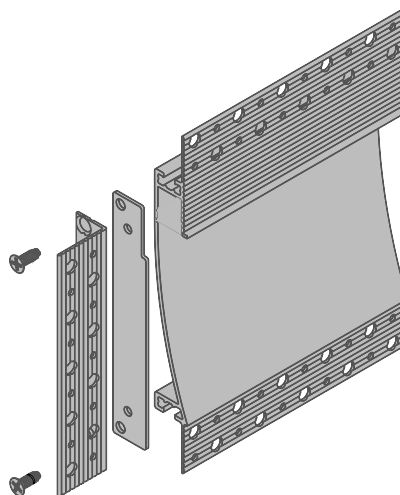


7. Assembly mudwing to the endcaps for short runs configurations

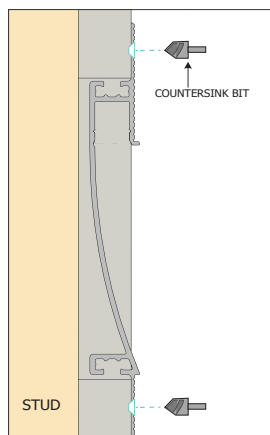


8. Carefully countersink holes in Perifina Wall Accent using the countersink drill bit.

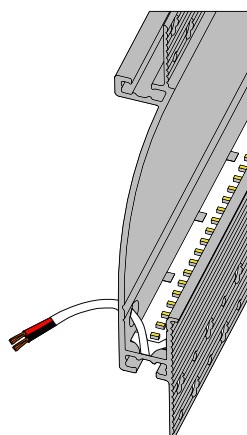

9. Remove the adhesive protector in the back of the LED tape light. Apply the tape light where indicated above. Pass the lead wire through the 1/4 in. hole.

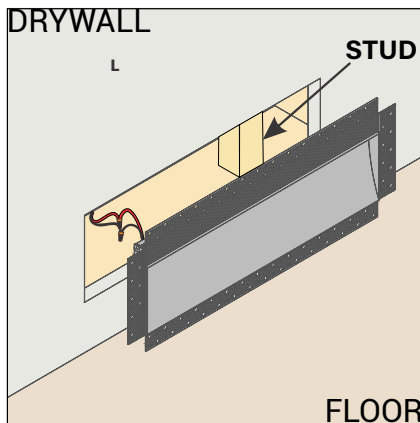


10. Connect tape light lead to low-voltage in-wall rated wire. Red is positive (+) and black is negative (-). sharp edges.

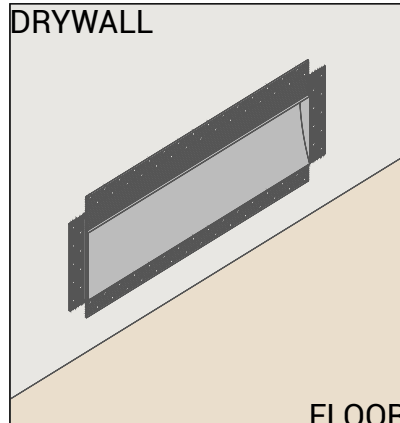


11. Pass the connected low-voltage wires through the opening in the drywall cutout.


Mudr Alcove 3in. - Channel

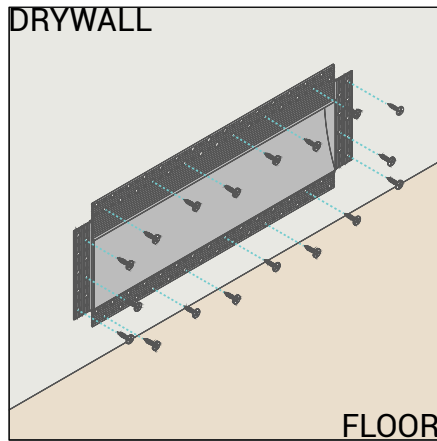


12. Secure the fixture to the drywall using the drywall screws. The suggested screw spacing is 4 inches. Use drywall screws into studs where possible.

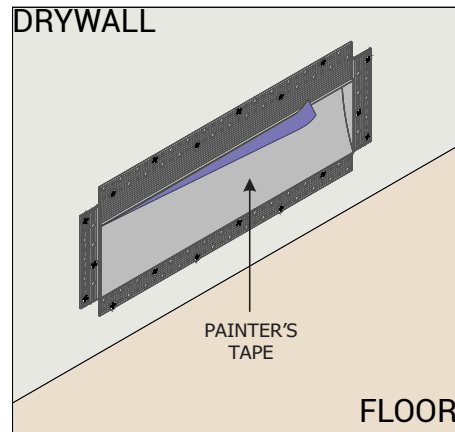


13. Cover the inside of the fixture with painter's tape if necessary before plastering, to prevent joint compound and dust from entering.

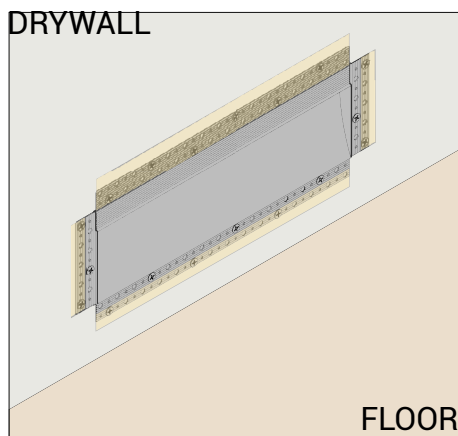


14. Apply drywall tape along the edges of the fixture to prevent cracking of joint compound after installation.

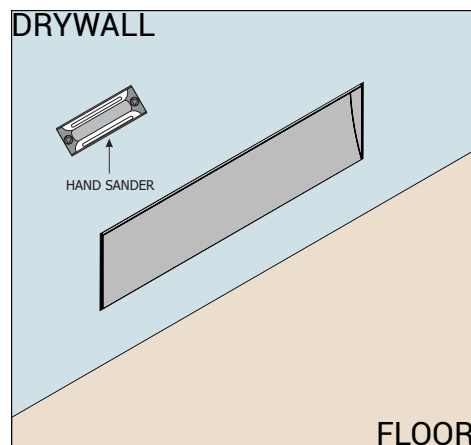

15. Apply drywall joint compound over the fixture's flanges. Then finish the wall.

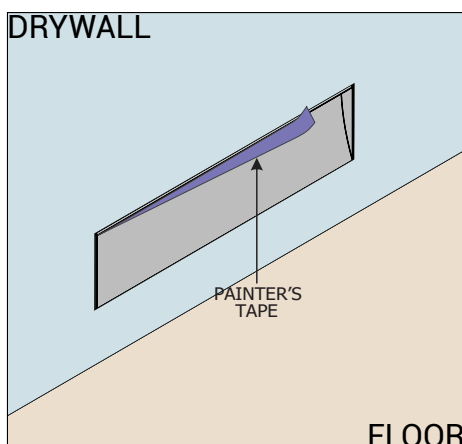


16. Remove the painter's tape and clean if necessary.

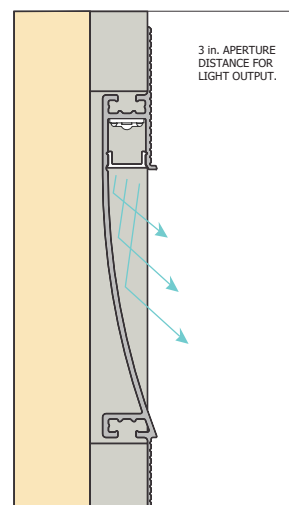

17. Affix the lens by gently snapping into place. Ensure it is fully seated.

Mudr Alcove 3in. - Channel

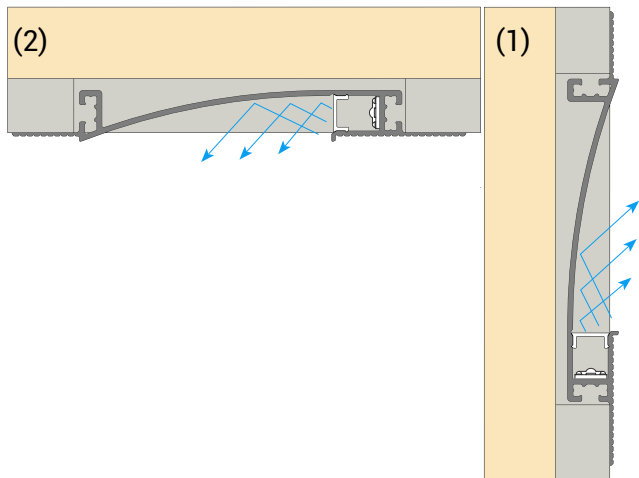

Possible configurations

Uplight (1) and Ceilign Mounting Wall wash (2)