INSTALLATION INSTRUCTIONS


PRODUCTS: US660/US760 (POST TOP)


IMPORTANT

⚠WARNING: TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

⚠CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

A.1

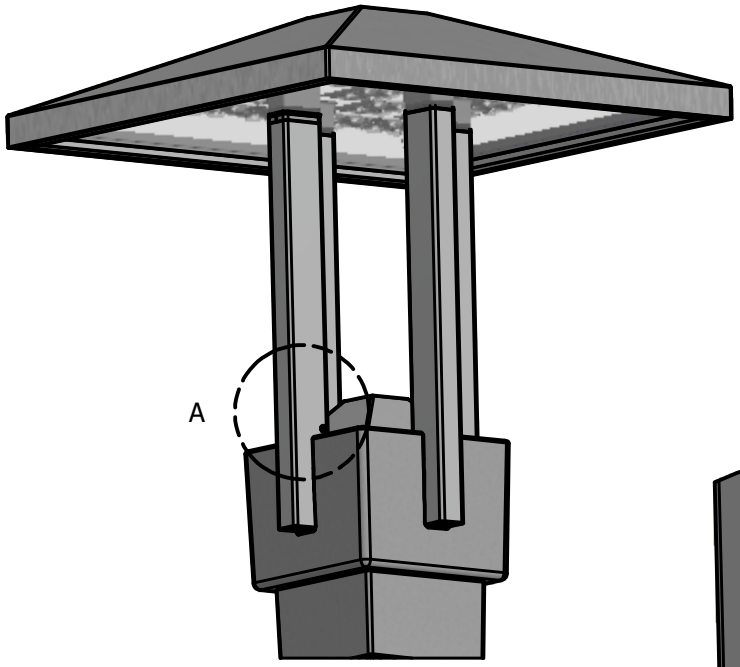

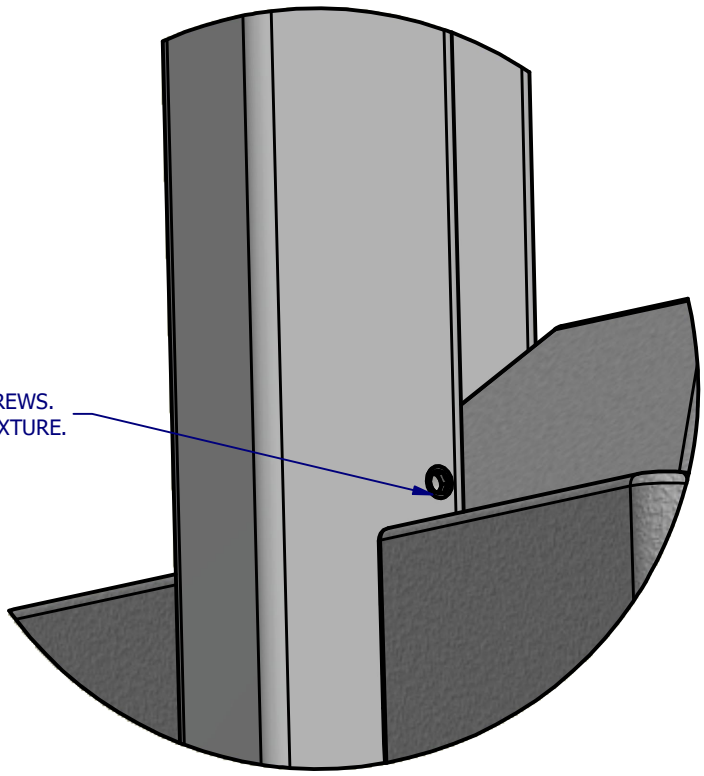


DETAIL A

INSTRUCTIONS:


1. ENSURE THAT POWER IS NOT BEING SUPPLIED TO THE INCOMING LINES. TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY WORK.
2. IDENTIFY THE STREET SIDE OF THE FIXTURE. THIS WILL BE IMPORTANT WHEN CONNECTING LINES AND SECURING THE FIXTURE.

DRAWN cbaker	DATE 6/1/2023	TITLE US660 AND US760 INSTALLATION INSTRUCTIONS		Sternberg
CHECKED	DATE			
THIRD ANGLE PROJECTION		SIZE A	DWG NO US660 AND US760_CUSTOMER-INSTALLATION	REV A
			SCALE	SHEET 1 OF 2

A.2

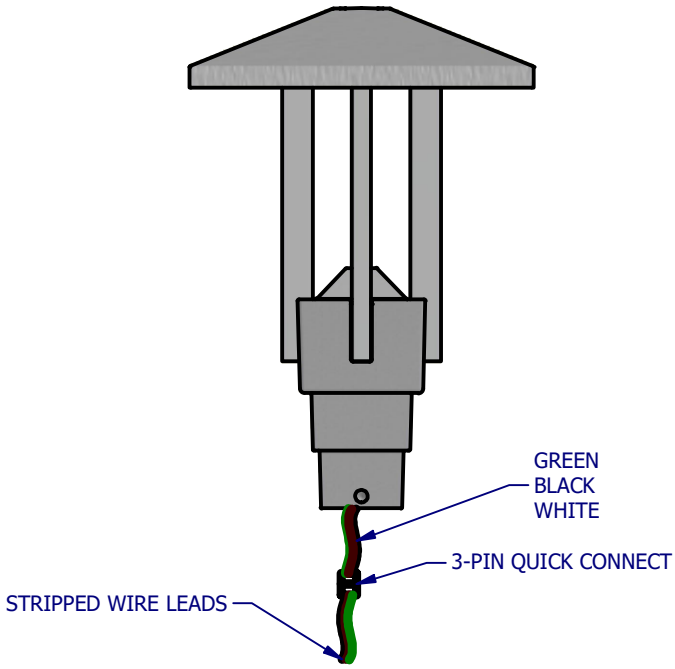

WIRING SCHEMATIC

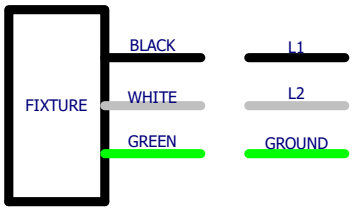


INSTRUCTIONS:

1. FIXTURE WILL BE PROVIDED WITH A 3-PIN QUICK CONNECT WITH BARE LEADS ON ONE SIDE. THESE BARE LEADS WILL BE USED TO CONNECT THE FIXTURE TO INCOMING POWER LINES.
2. CONNECT THESE LEADS TO INCOMING POWER LINES PER GENERIC WIRING DIAGRAM ABOVE.

NOTE: IT IS RECOMMENDED TO INSTALL A STRAIN RELIEF INSIDE POLE TO SUPPORT HANGING WIRES


A.3

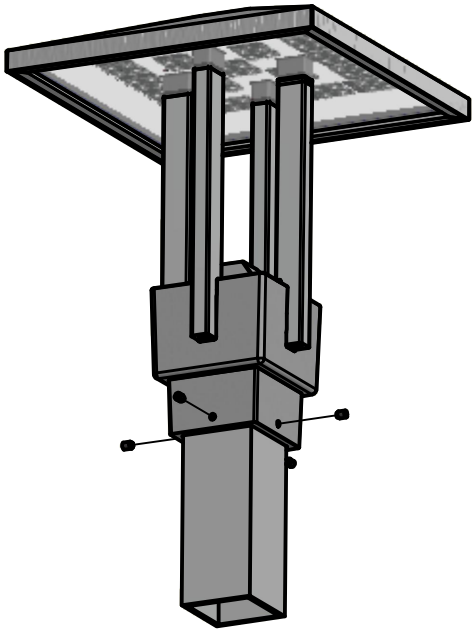

US760
(4) 3/8 - 16 X 5/8"
SET SCREW
(PROVIDED)



US660
(4) 3/8 - 16 X 1/2"
SET SCREW
(PROVIDED)

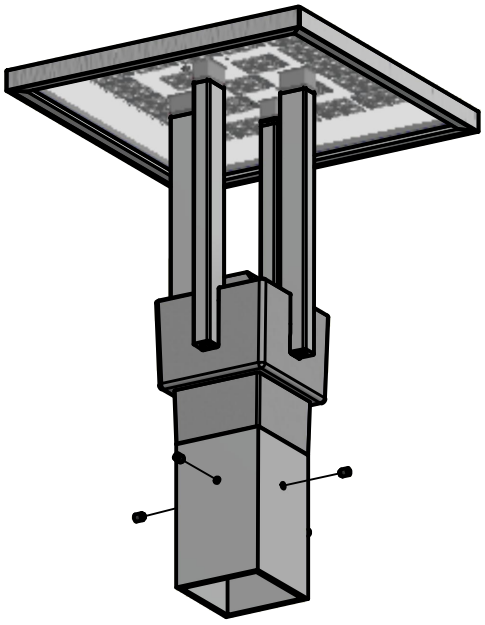

INSTRUCTIONS:

1. ALIGN THE CORRECT SIDE OF THE FIXTURE WITH THE STREET AND PLACE ONTO POLE.
2. TIGHTEN SET SCREWS ON ALL FOUR SIDES TO SECURE

NOTE: SET SCREWS ALSO SERVE AS THE ADJUSTMENT FEATURE TO ENSURE THE FIXTURE IS ALIGN AND STRAIGHT ON THE POLE.

DRAWN cbaker	DATE 6/1/2023	TITLE US660 AND US760 INSTALLATION INSTRUCTIONS	Sternberg
CHECKED	DATE		
THIRD ANGLE PROJECTION	SIZE A	DWG NO US660 AND US760_CUSTOMER-INSTALLATION	REV A
		SCALE	SHEET 2 OF 2