SternbergLighting
ESTABLISHED 1923 / EMPLOYEE OWNED

Installation Instructions	**Product: 1335LED-5050 REVERE**
Effective Date: June 18th, 2020	**Part Description:** Revere Fixture

⚠	**WARNING:** To avoid fire, shock or death, turn off and lockout power before performing any maintenance.
⚠	**CAUTION:** This Fixture must be wired in accordance with the National Electric Code (NEC) and all applicable local codes. Proper grounding is required. A qualified electrician must do all work.

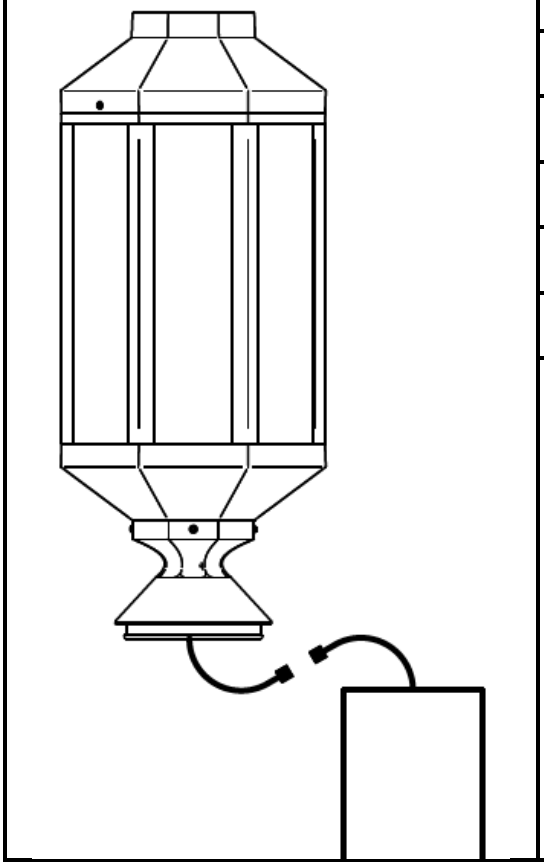

Step 1: Disconnect the male quick disconnect from the female disconnect.

Step 2: Wire the free end of the male connector to the supply lines from pole. See wiring schematic below.

Step 3: Connect the male and female connectors together and press firmly together to lock them.

Step 4: Guide wires into the tenon and carefully install the fixture on top of the tenon. Do not pinch wires.

Step 5: Level fixture and ensure that the Street Side Label is facing the street.

Step 6: Uniformly tighten all 3 set screws located at the bottom of the fixture to secure the fixture to the Tenon.

Wiring Diagram

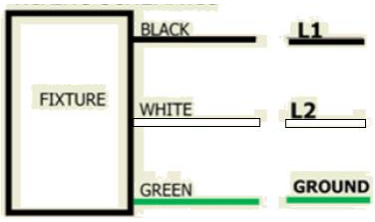

Revision History

Rev	Description of Revision	Release Date	Engineer Author	Engineer Approval
A	Initial Release	ECN 06-18-2020 TK1	Tom K.	Mohan